




1

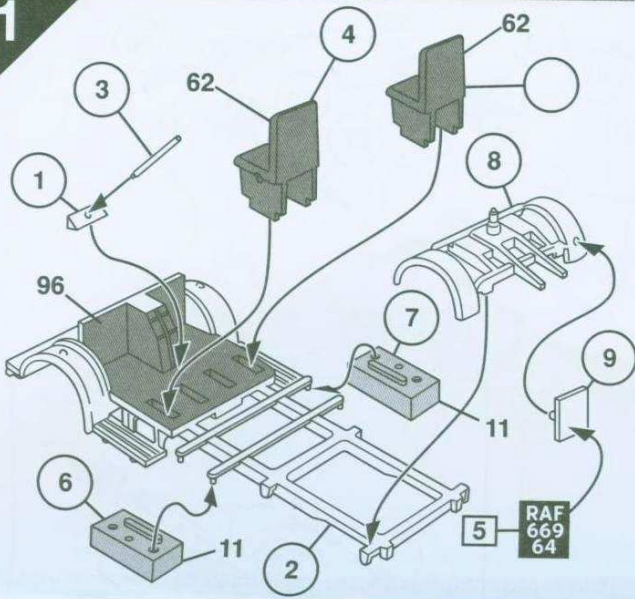


2

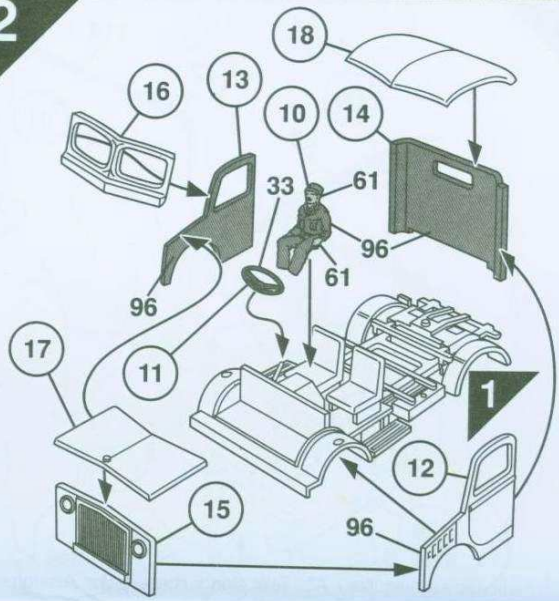


3

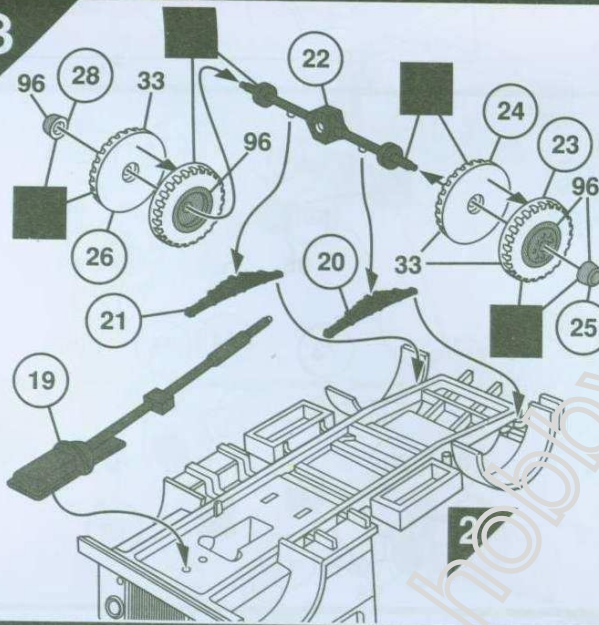


4

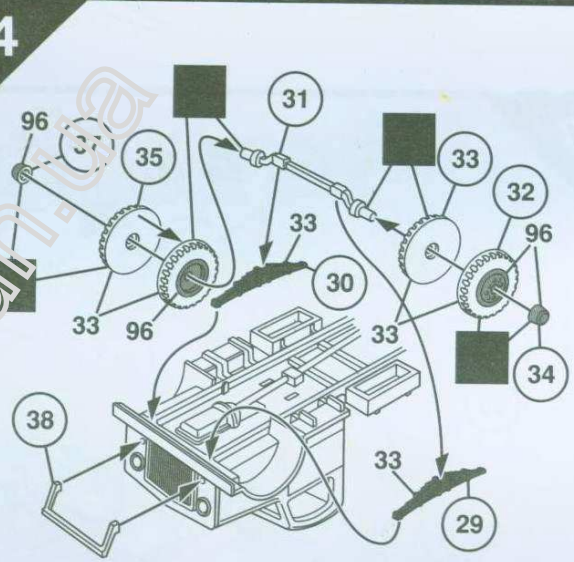


5

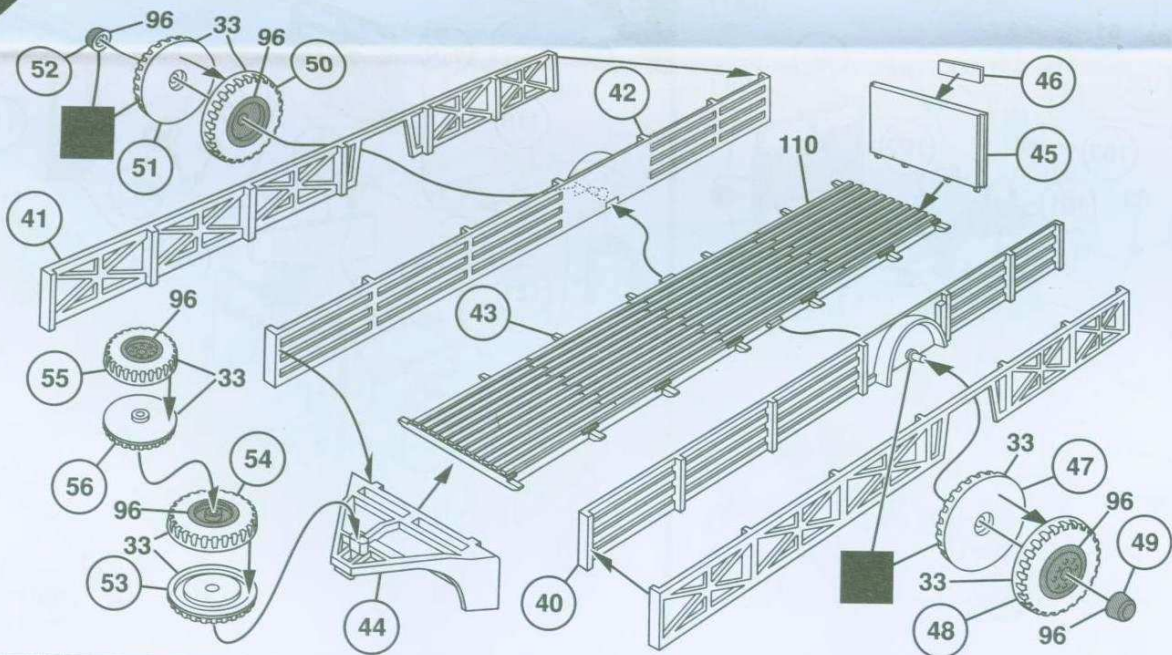


6

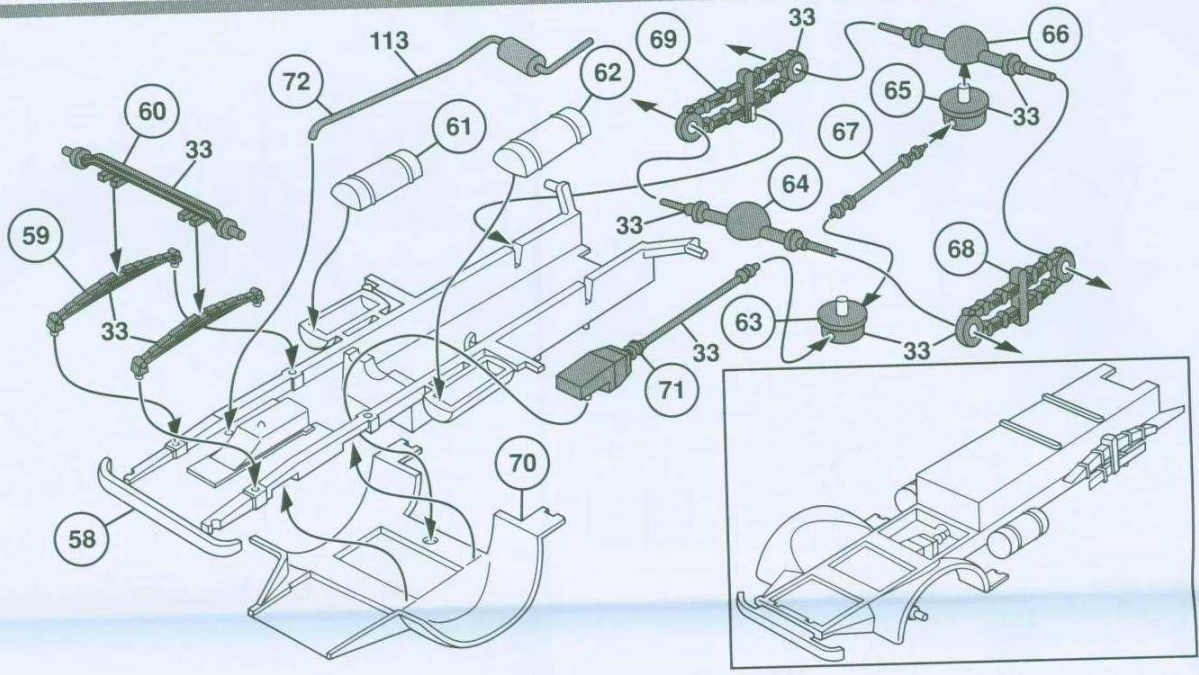


7

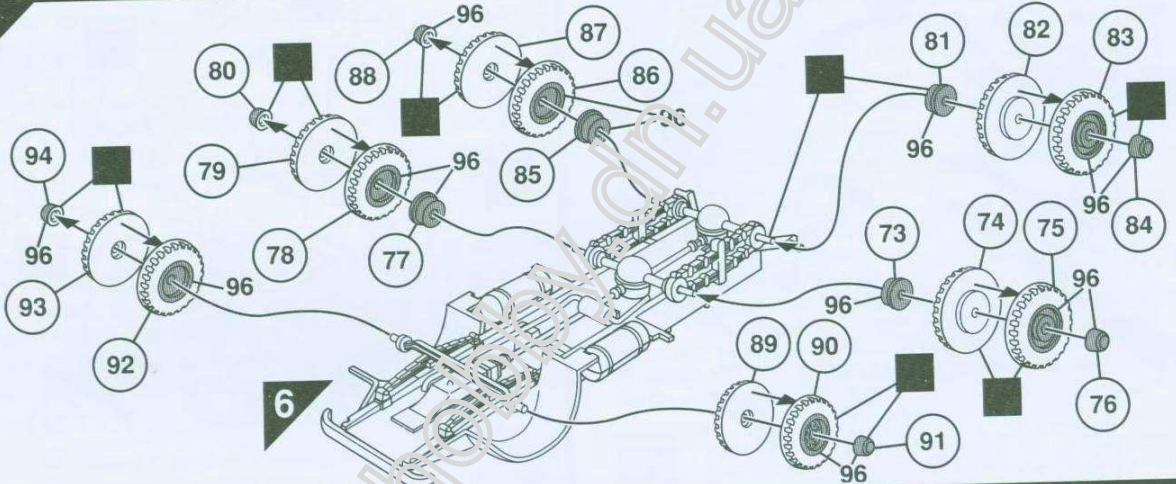



8

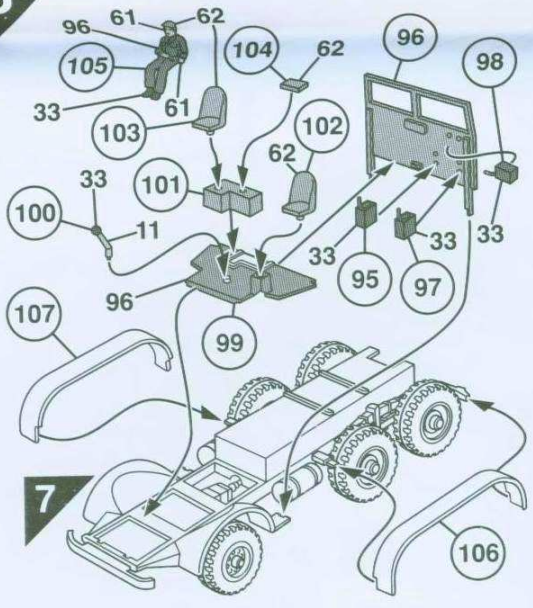


9

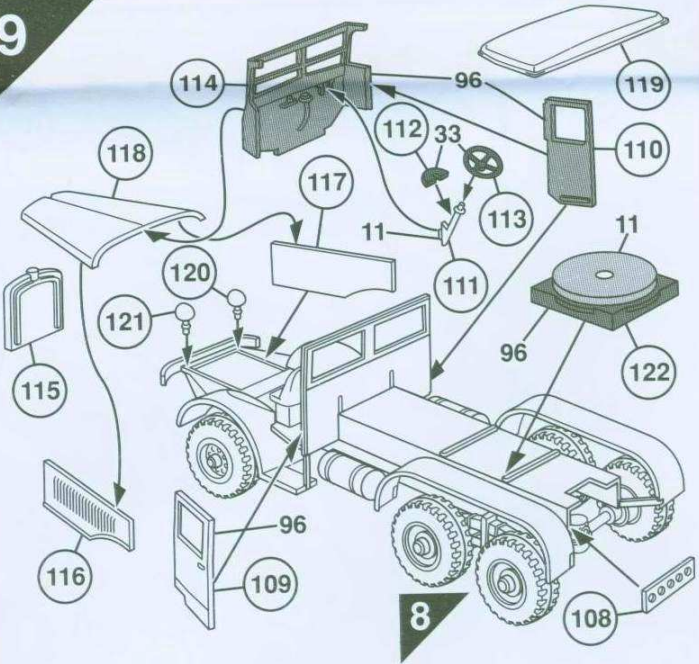

10

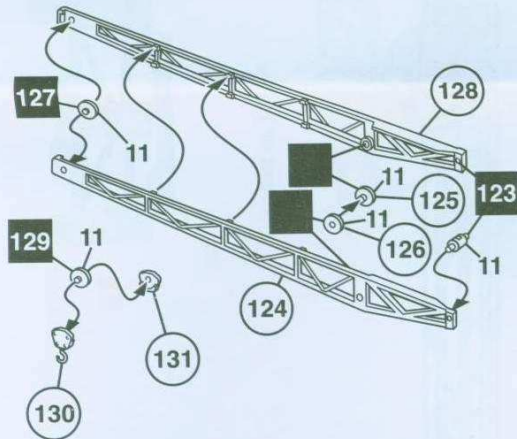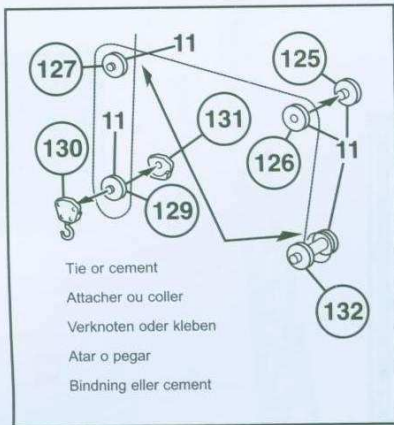


11


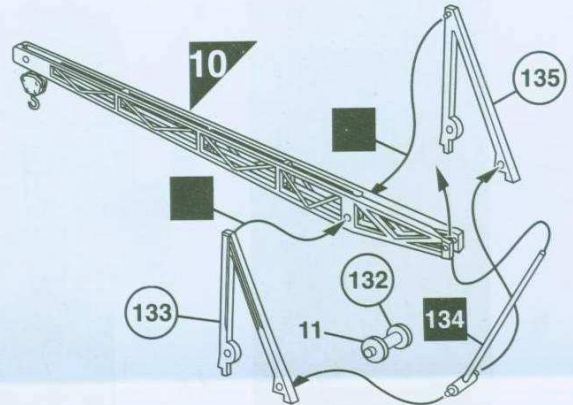


Do not load part 134 into job until part 143 is in position  
 Ne pas charger la piéce 134 sur la fléche avant que la piéce 143 soit en place  
 Teil 134 erst einsetzen, wenn 143 angebracht ist  
 No carregues la pieza 134 en el conjunto hasta haber colocado la pieza 143  
 Montera inte del 134 förrän del 143 sitter på plats



12

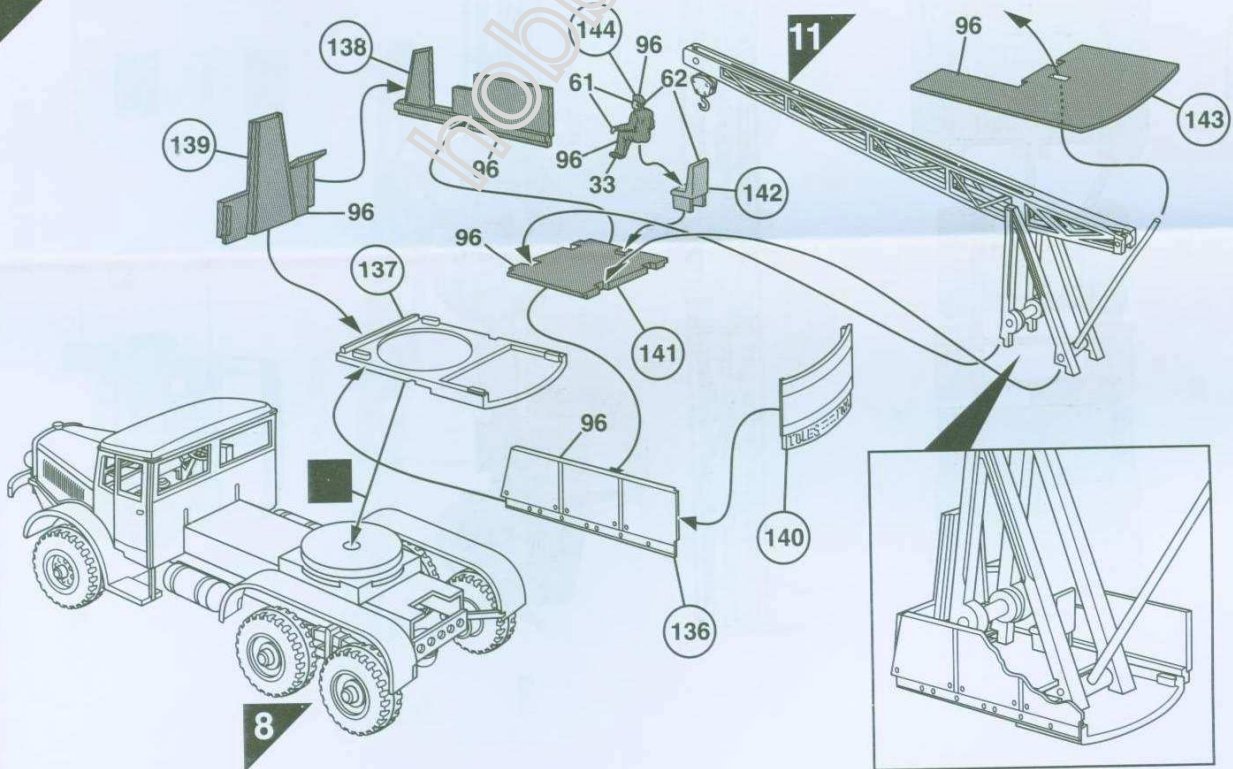


# Queen Mary Transporter

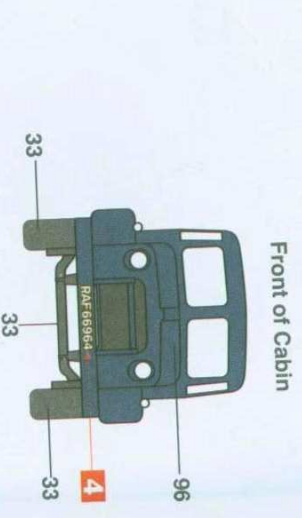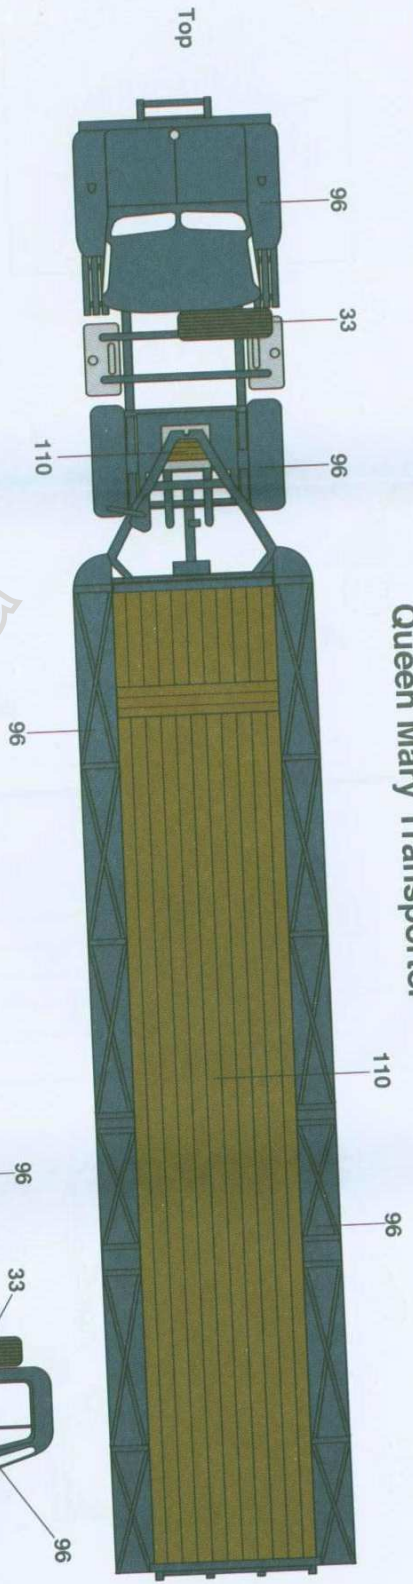

- 11 Silver
- 33 Matt Black
- 96 Matt RAF Blue
- 110 Matt Natural Wood

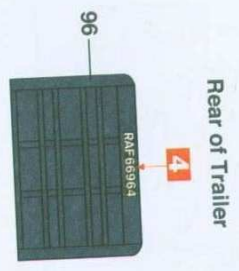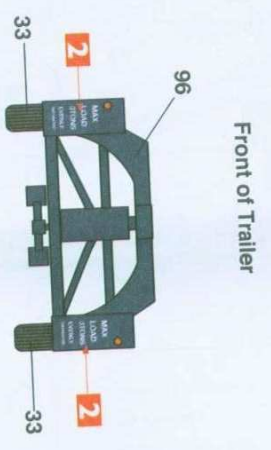

# Thornycroft Amazon and Coles EMA Mk.7 Crane

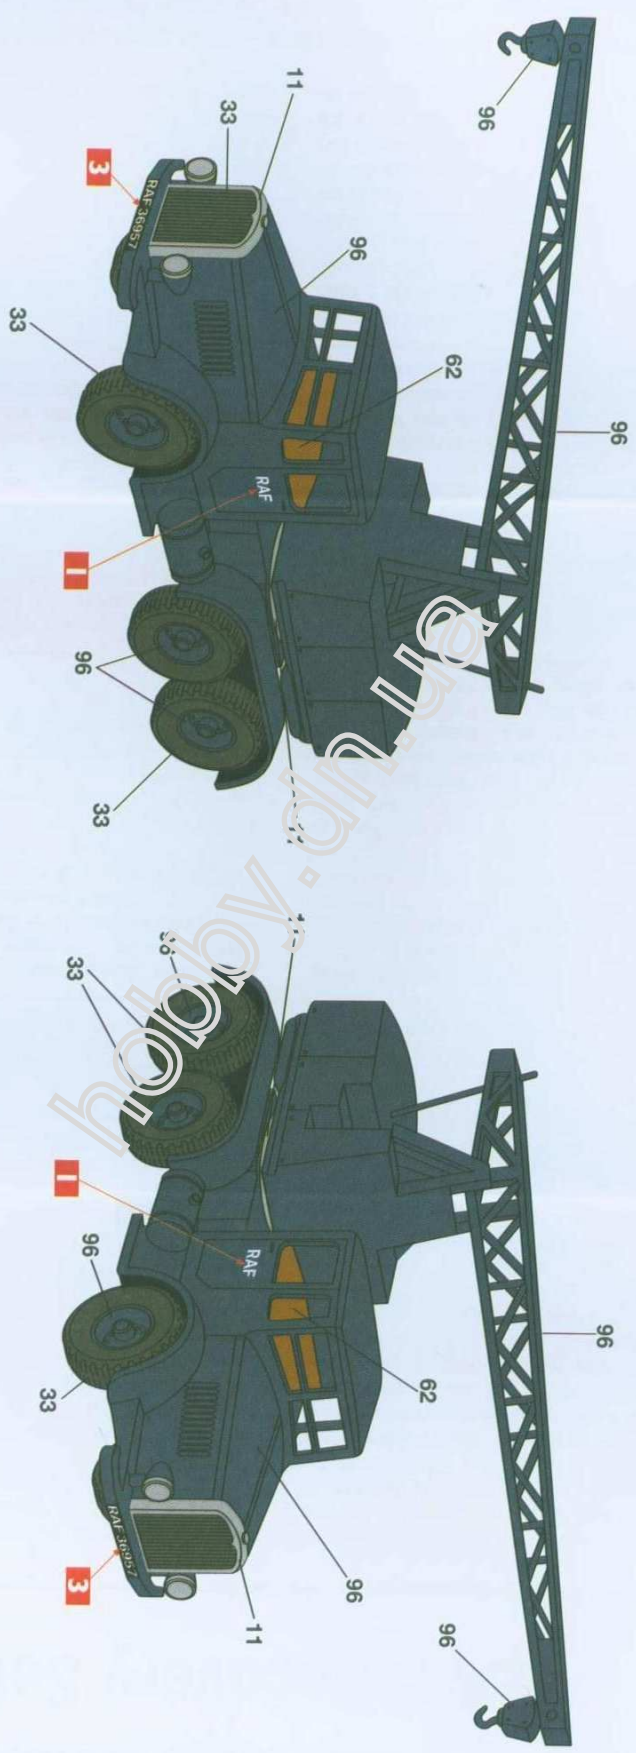

- 11 Silver
- 33 Matt Black
- 62 Matt Leather
- 96 Matt RAF Blue