

## PLEASE READ BEFORE OPERATION!

\* Tools recommended as below: (Not included)

Adhesives, Paints; Side Cutters; Sharp Edged Pliers; Modeling Kn., Modeling

File: Nippers; Drill; Scissors, Sand Paper; Soft Cloth; Cyanoacr fate Glue

ロシア BM-13 カ

- \* Make sure to read this instruction listed below before assembing
- \* The kit contains the small parts, they can be dangerous." sv allowed by mistake, so keep them away from reach of children.
- \* Cut the all parts off carefully and remove the waste parts into the garbage can.
- \* More caution and care should be needed for cutting and handling the photo
- etched parts

  \* Make attention that some parts should be attached the decal when assembled
- \* During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake
- \* When using the adhesives and paints, please do not use them in the closed room
- or near the fire, also must be very careful to protect your eyes, face and clothes.

  \* Adult supervised when assembled by children under 14 years old

### 装配前请仔细阅读:

\*推荐使用的模型工具(请自备): 专用模型胶水,专用模型油漆,水口剪刀,长咀钳,刀片, 锉刀,镊子钳,钻、剪刀,软布,砂纸、瞬间快干胶等。

俄罗斯BM-13N火箭炮

\*用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。

ヤロケット砲

- \* 切取蚀刻片时应特别注意防止利边划伤手指。
- \*用模型锉刀小心锉平所有零件表面的注射浇口。
- \* 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- \*注意某些零件表面需在装配时同步贴上水贴纸。
- \* 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍 而引起意外。



cyanoacrylate glue 强力胶



weight 配重



make hole 钻孔



cut / remove 切除



option 选择



no cement 不涂胶水



decal



bend 查曲




repair 填补


# The method to apply the decals


- 1.Cut off the decal from the decal paper and put it into the warm water 40 °C for 10 seconds.
- 2. Take the decal from the water and put it on a piece of clean cloth.
- 3. Remove the decal slowly from the paper to the targeted location by a wet finger.
- 4 Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


#### 水贴纸的使用方法:


- 一. 把相关的印花从水贴纸上剪下, 放入40℃左右的 温水中浸10秒。
- 二、然后将印花放在干净的布上。
- 三 拿上印花纸板, 手指蘸水将印花移到适当的位置。
- 四.用软干布轻压印花直至水干,气泡消失。

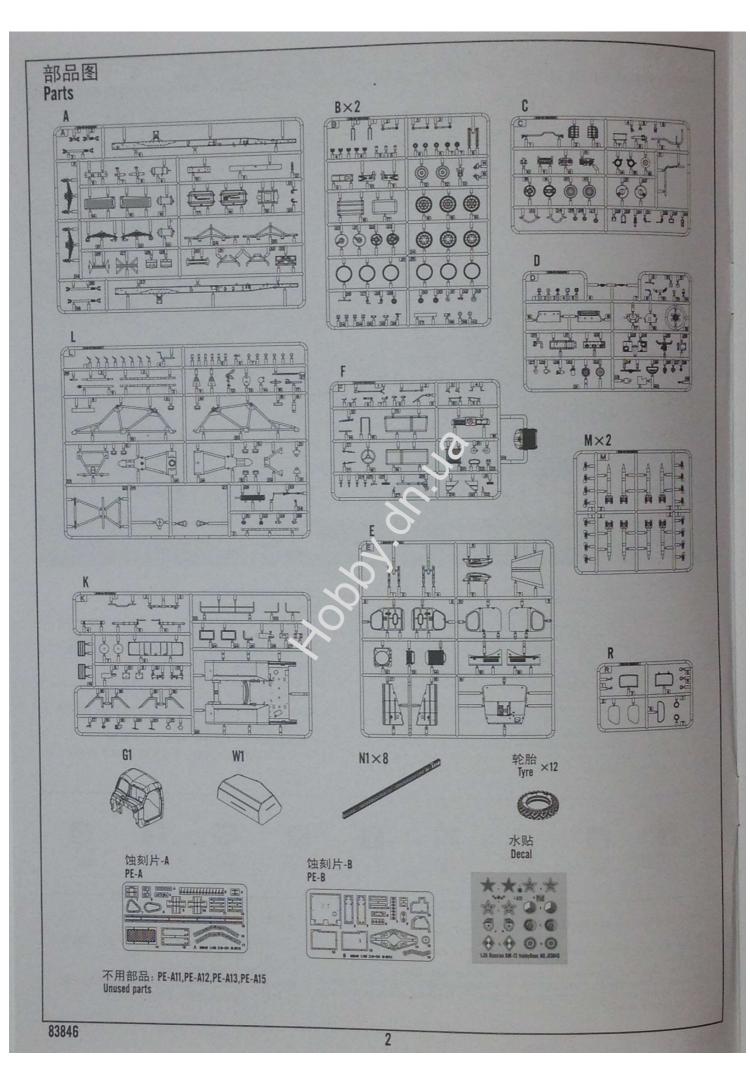


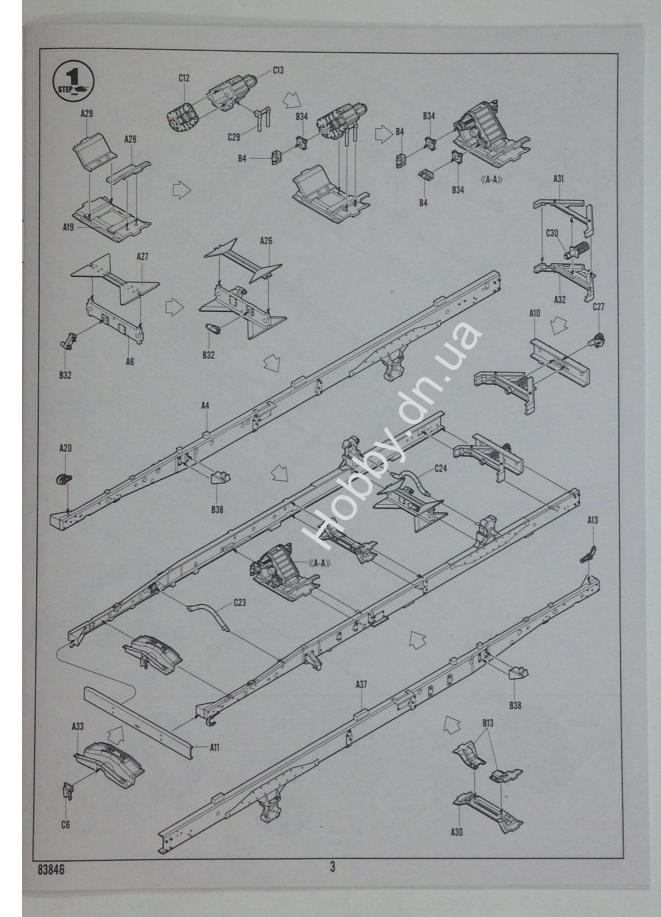


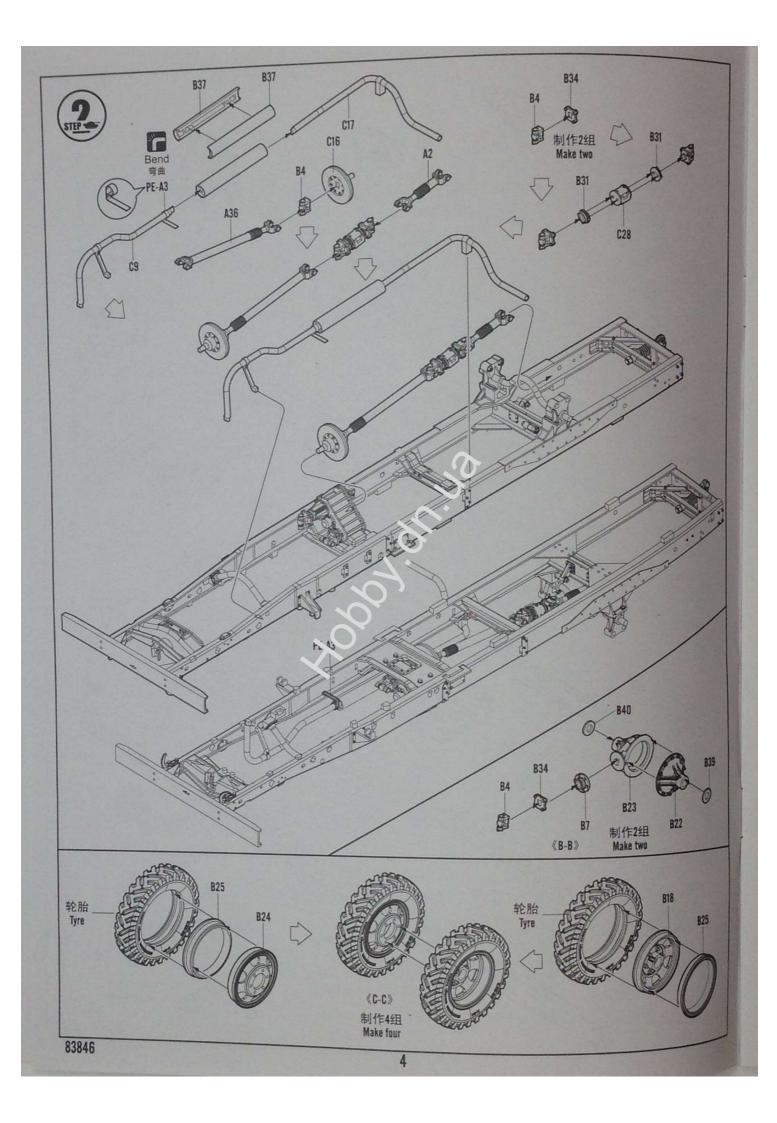


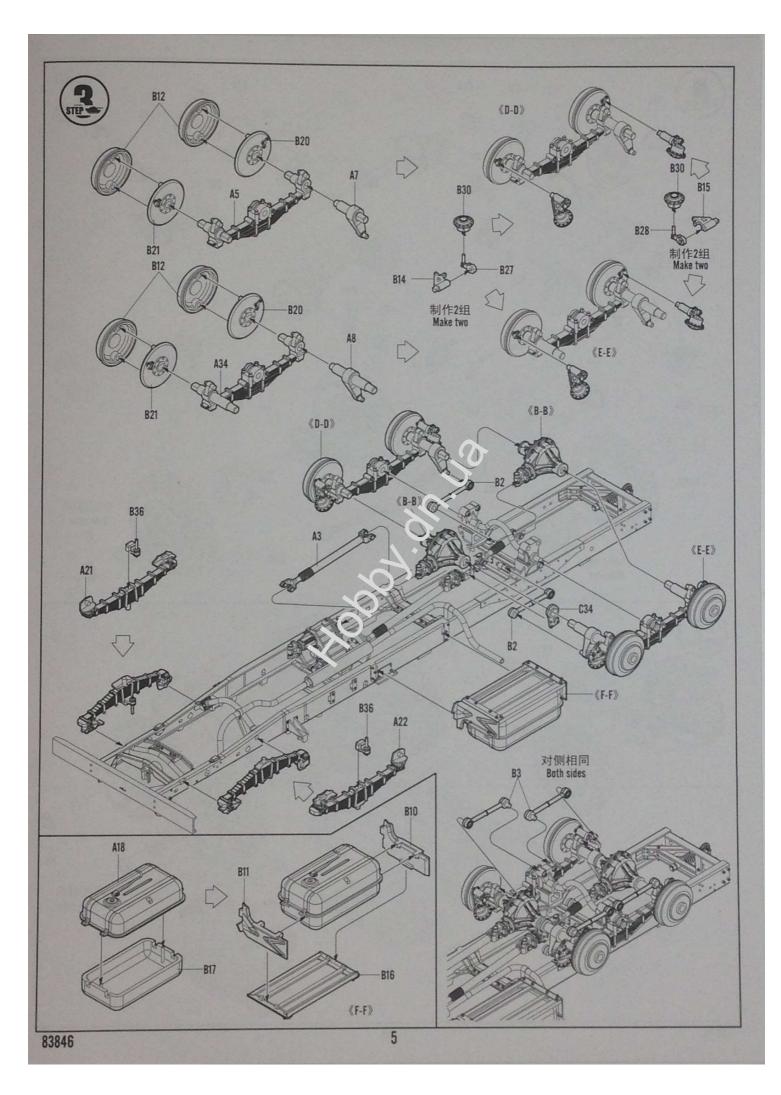


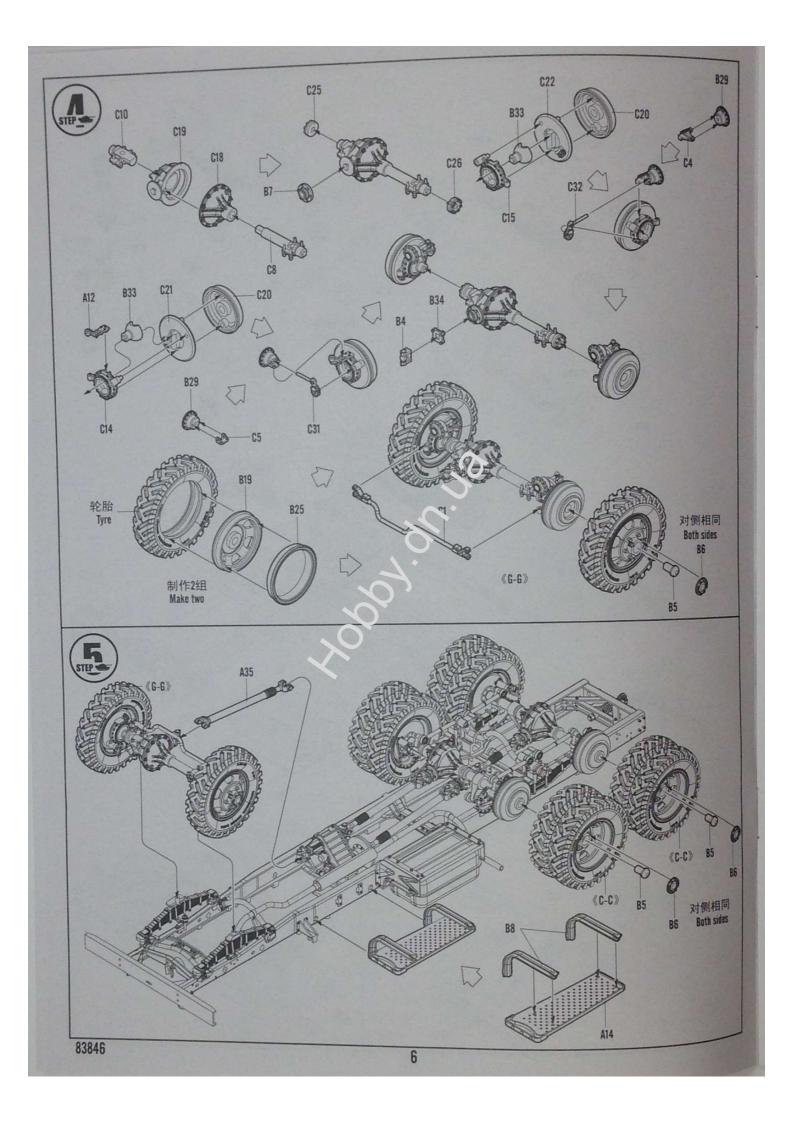


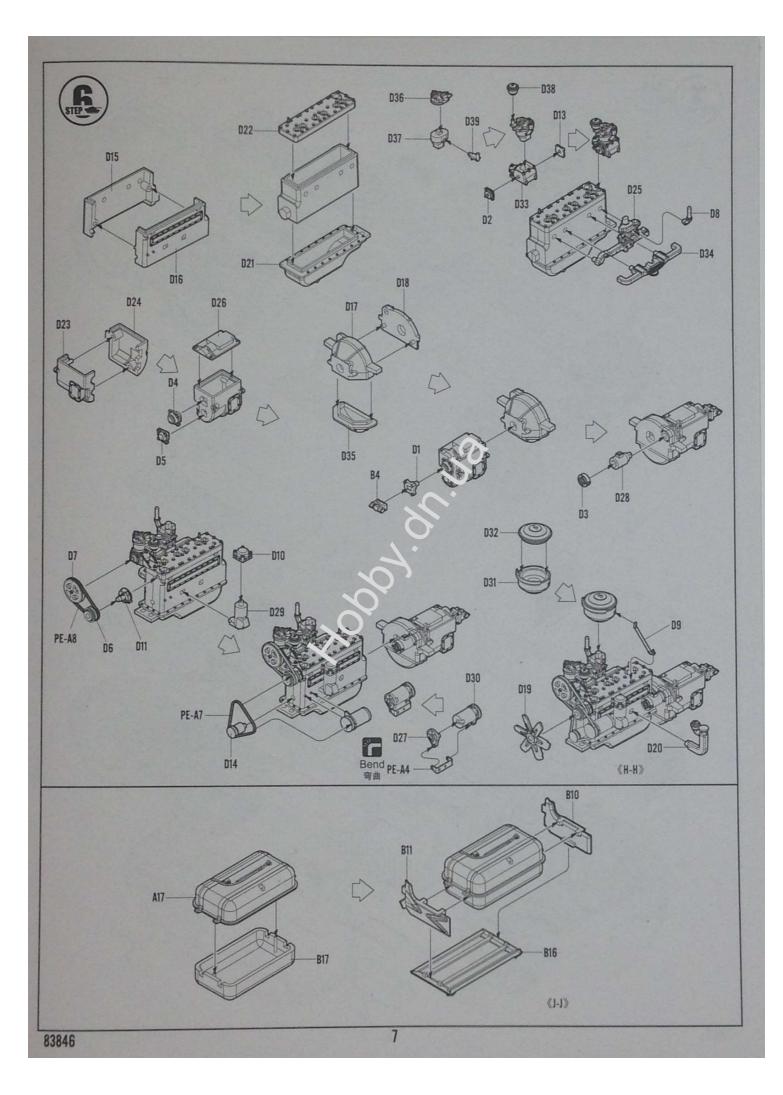


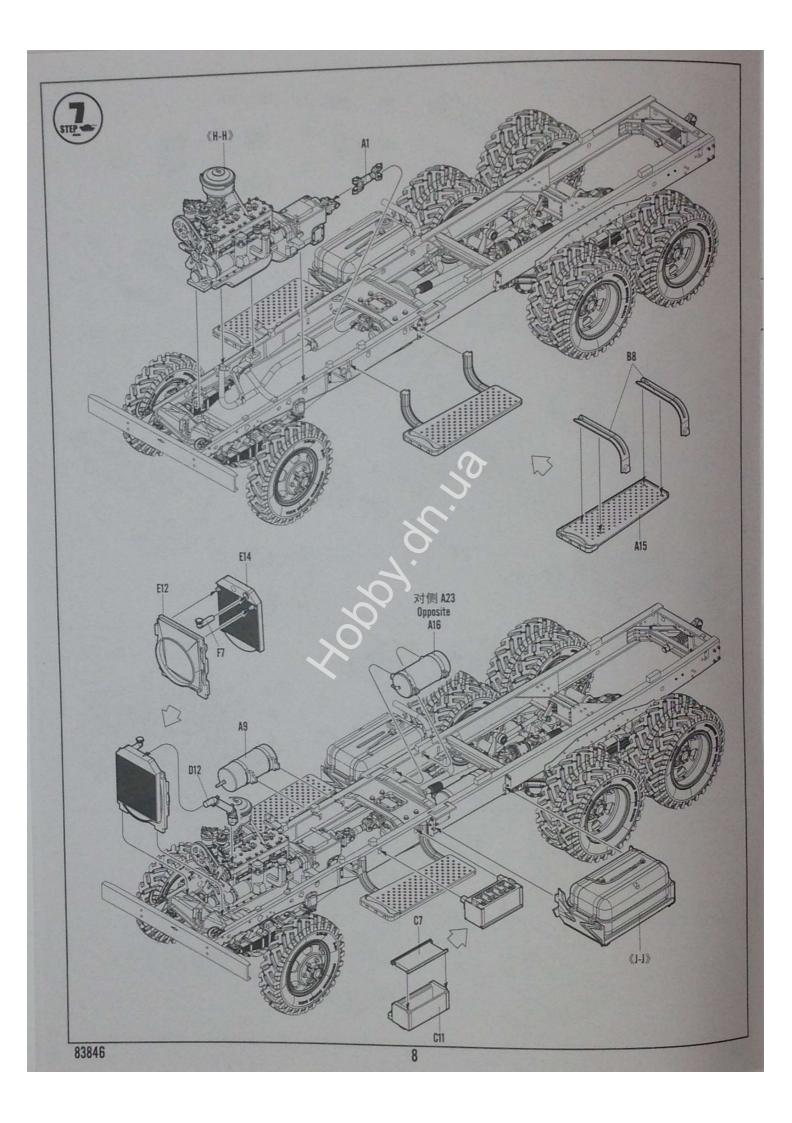


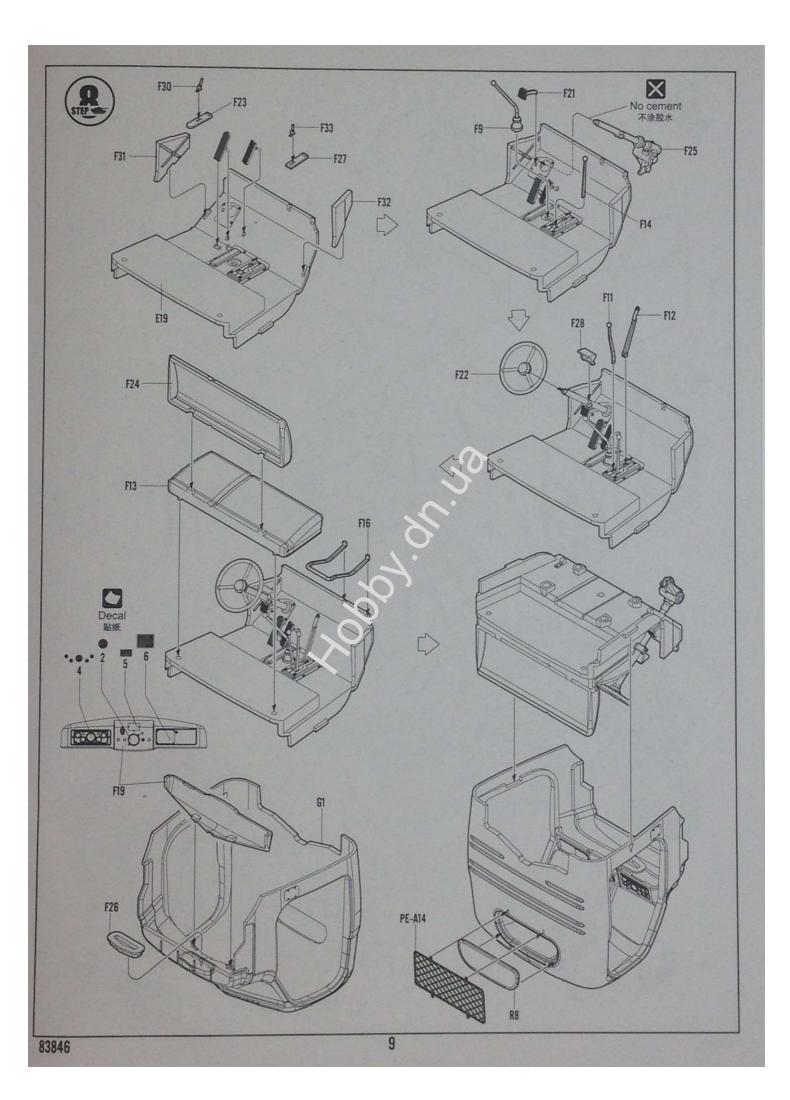


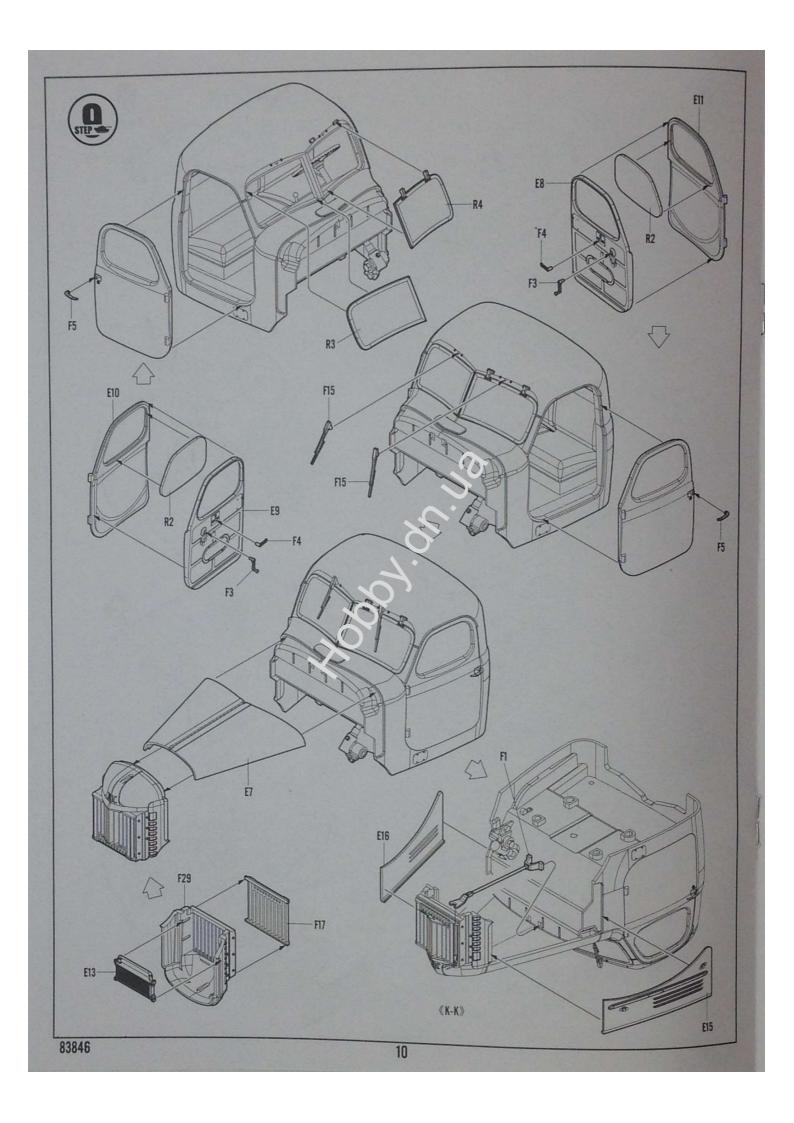


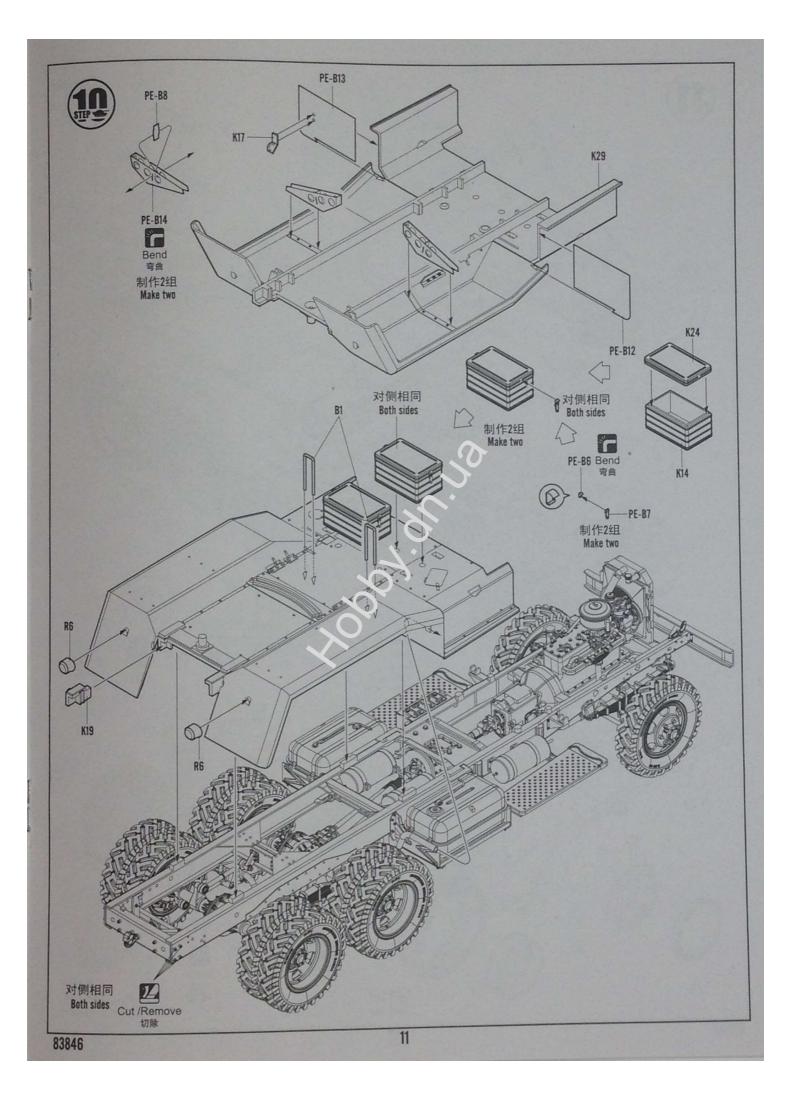


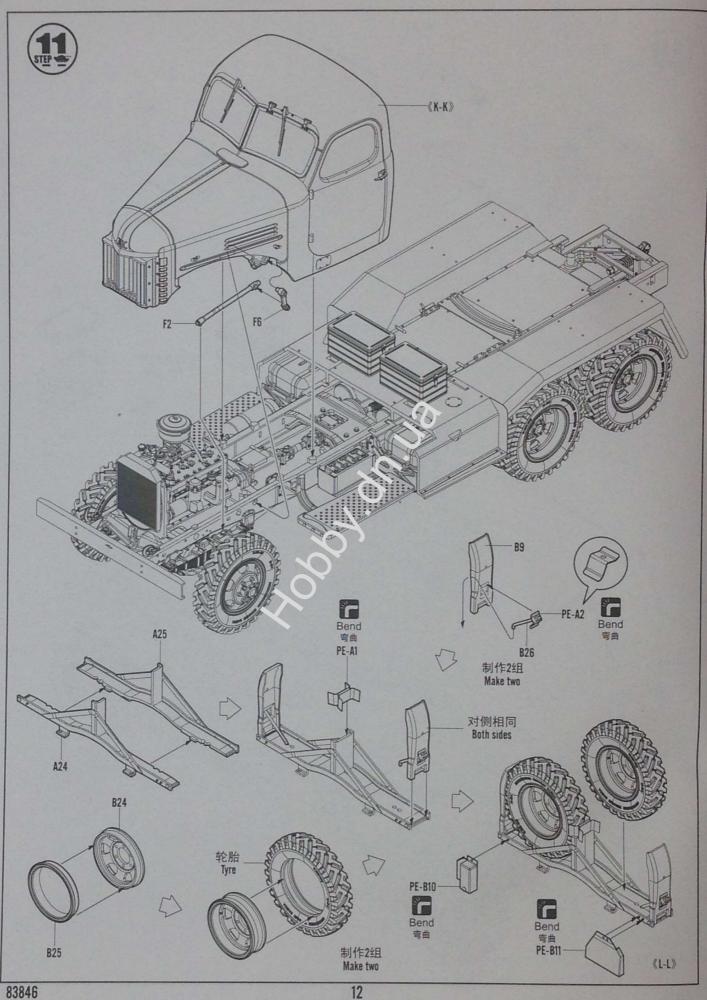


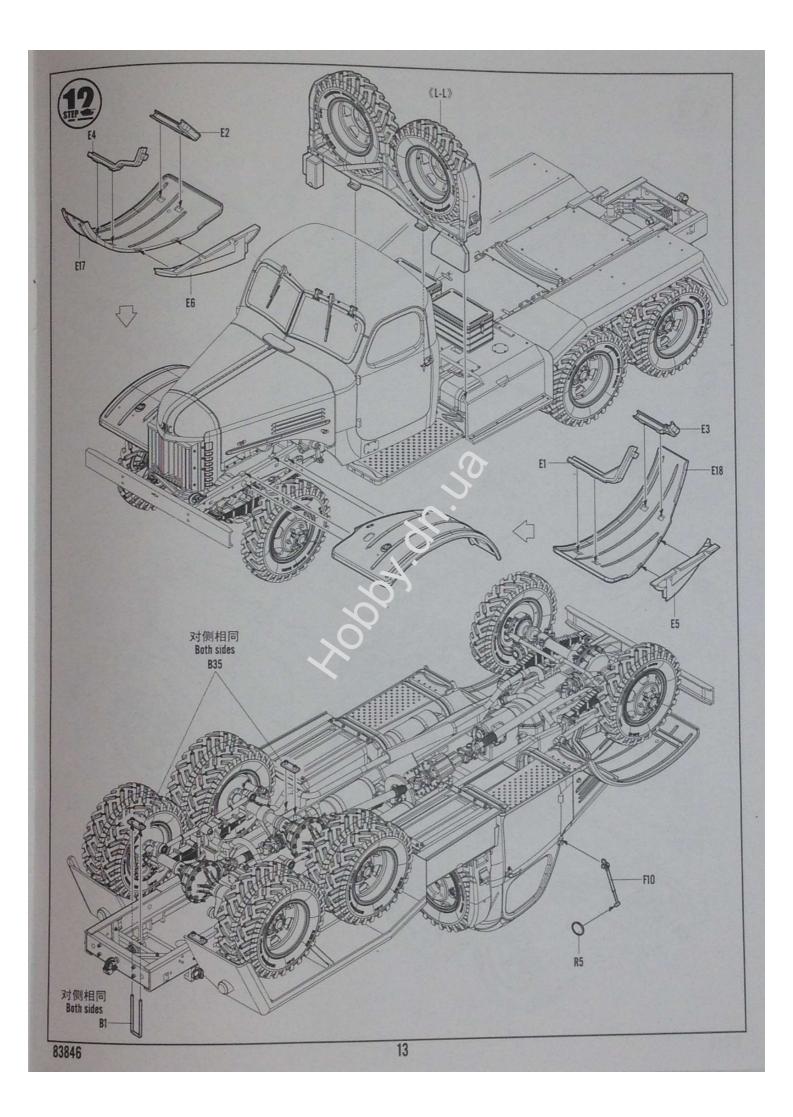


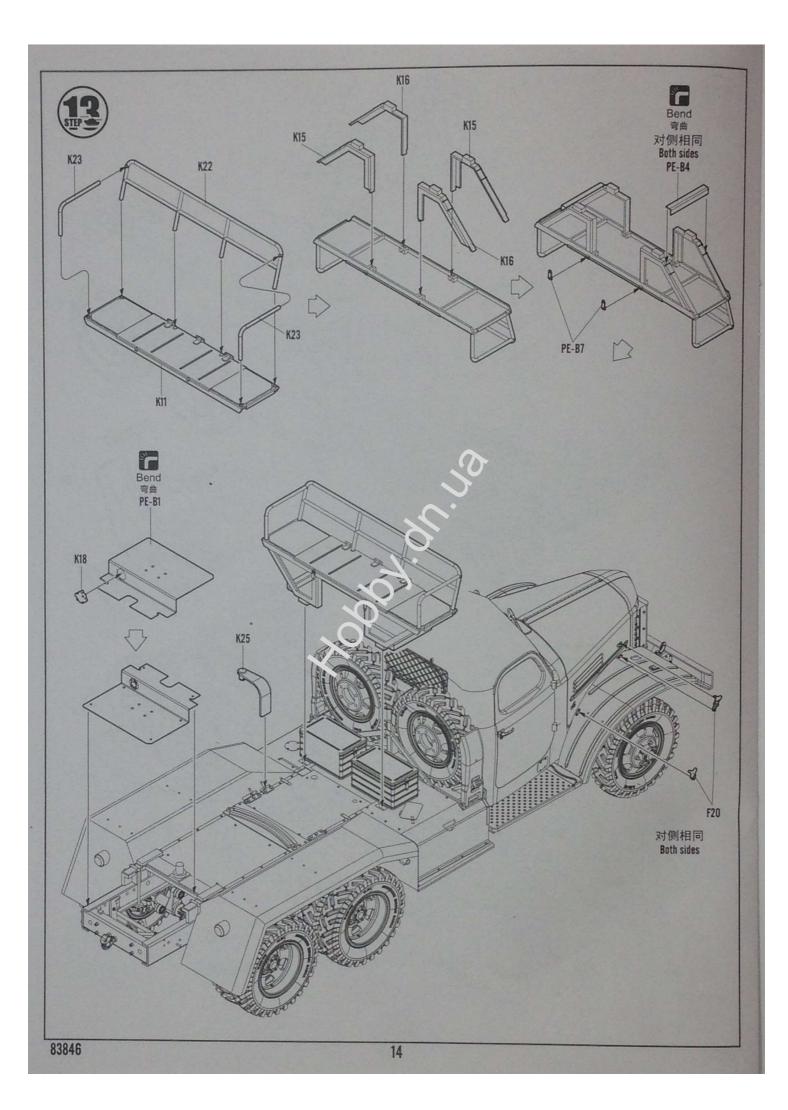


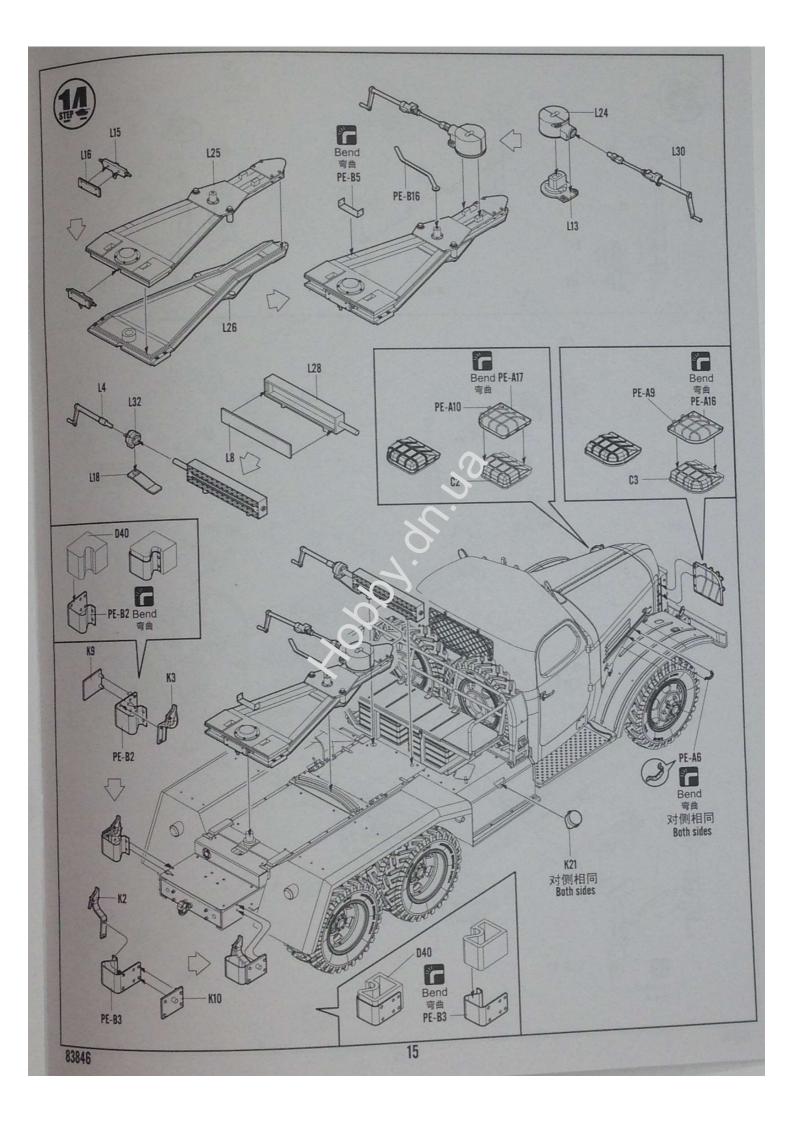


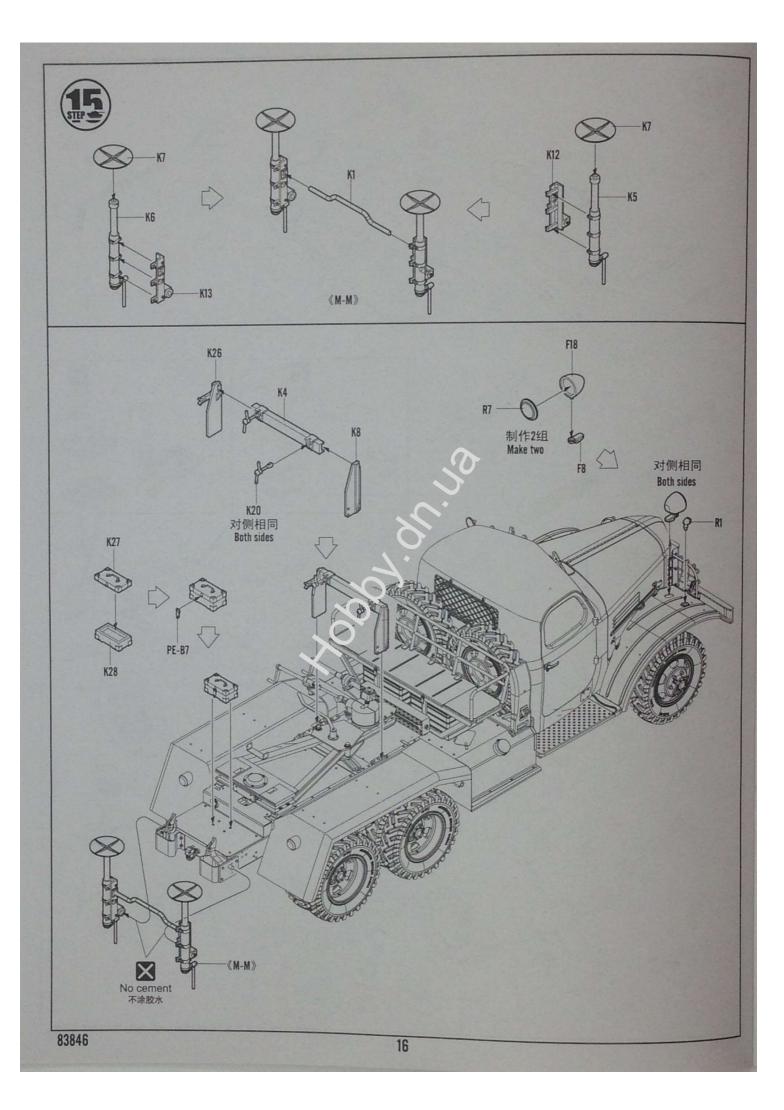

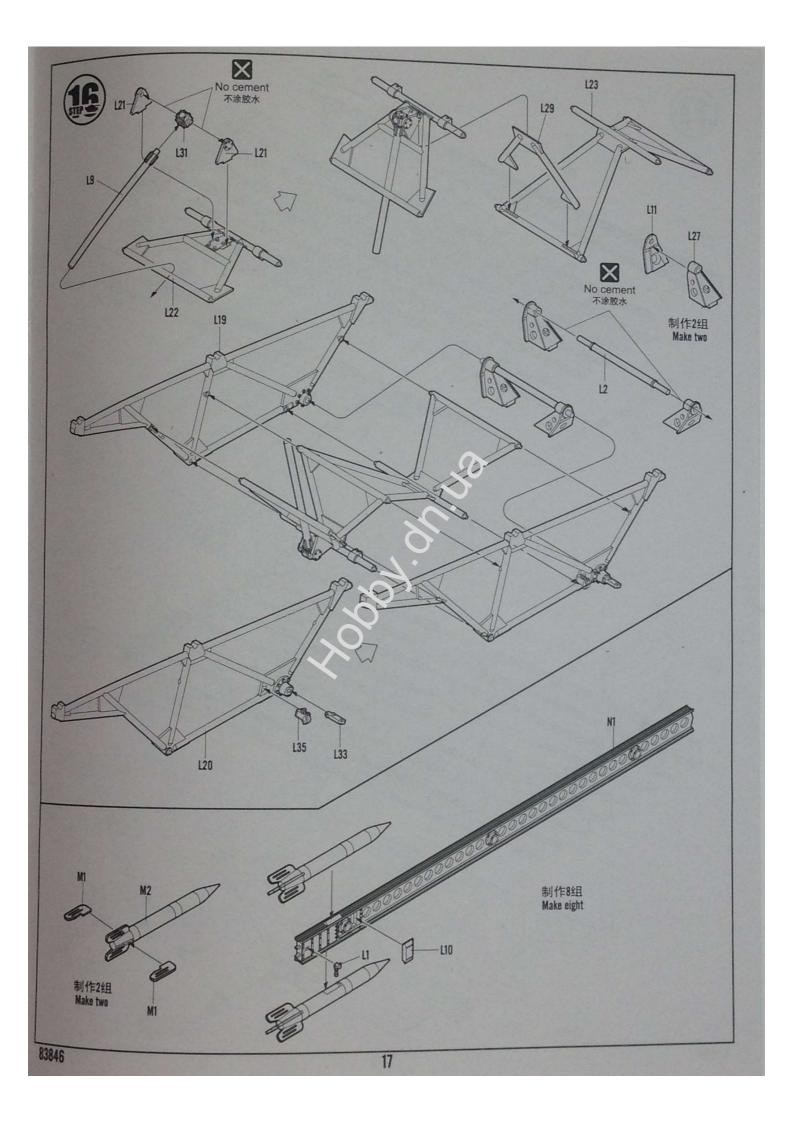

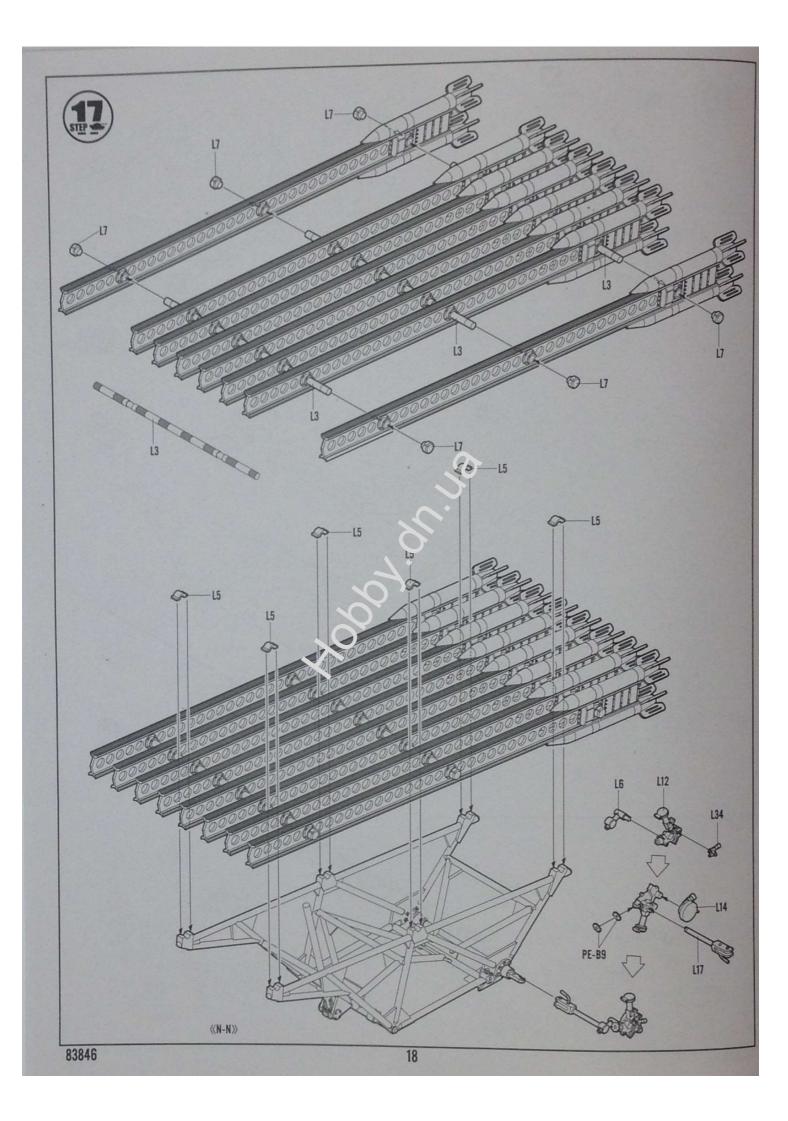

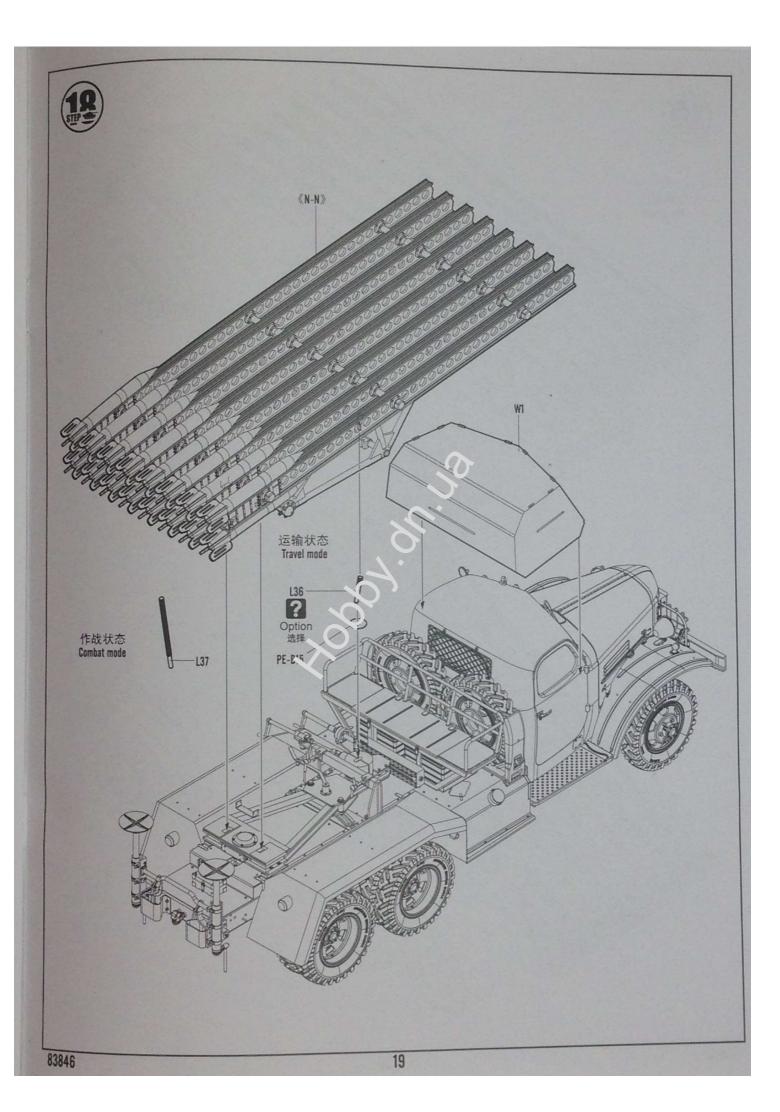


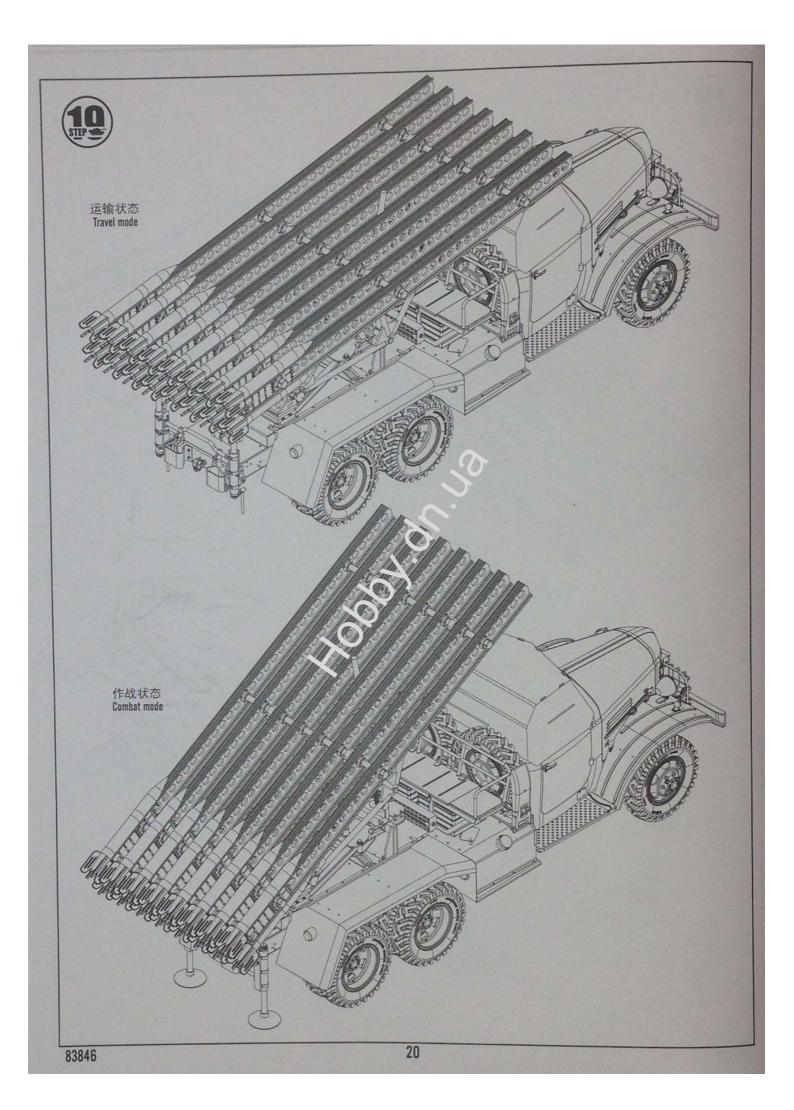

# Russian BM-13

ロシア BM-13 カチューシャロケット砲 俄罗斯BM-13火箭炮



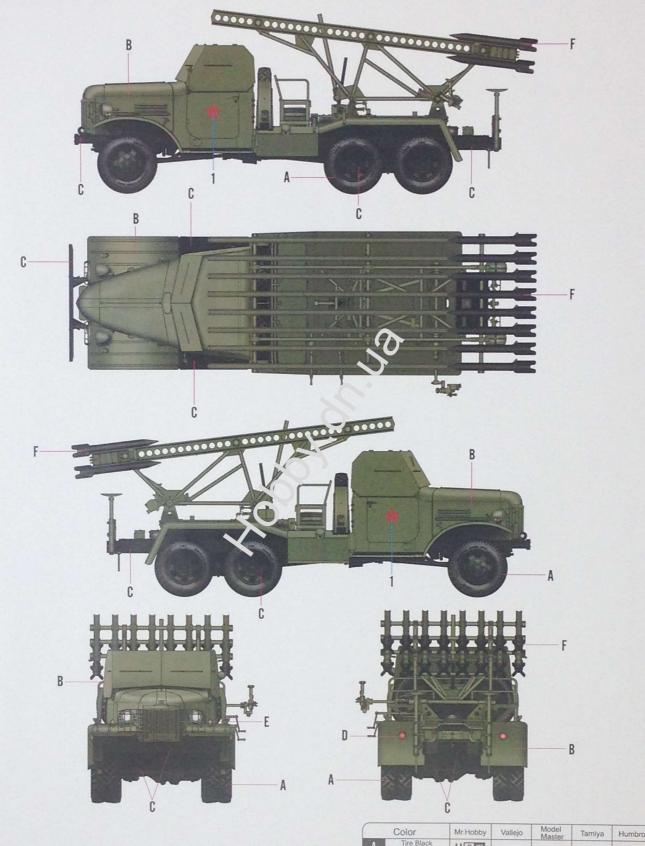

	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol –
A	Tire Black 胎腸色					
В	Russian Green(2) 苏联辑	H 136	823	-	-	-
C	Black 黑色	H 2 2	861	1747	XI	21
D	Clear Red 簡明紅	H 90 178	934	-	X27	-
	Clear Orange 透明物	HEE	935	-	126	-
	Steel Akt	HEIGH	884	1492	-	

NO.:83846

Some paints may not be available in your country. Please check your local hobby ship to subject to