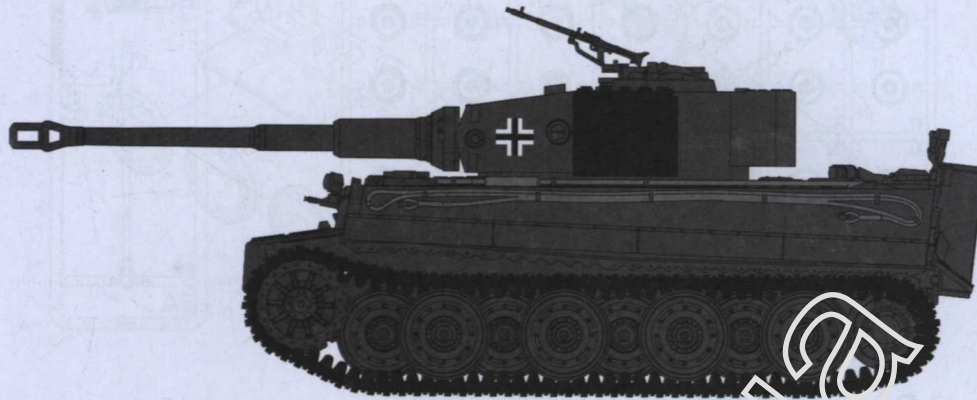# German Tiger with 88mm kwk L/71

德国虎式坦克-88mm kwk L/71炮管

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所交零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 蚀刻片时应特别注意安全，防止利边伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长嘴钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。

|				
使用强力胶 Cyanoacrylate glue	配重 Weight	钻孔 Make hole	切除 Cut / Remove	贴纸 Decal
锉平 File / Sand	选择 Option	不涂胶水 No cement	弯曲 Bend	先装 Install it first

水贴纸的使用：

1.从水贴纸上剪下印花;

2.将印花放入温水中浸10秒，然后放在干净布上。

3.拿着印花纸板将印花移到模型上;

4.手指蘸水将印花移到适当的位置;

5.用软布轻压印花直至水干，汽泡消失。

DECAL APPLICATION

1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.
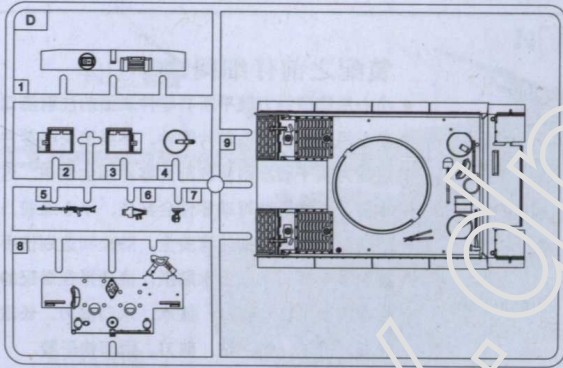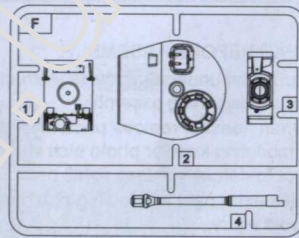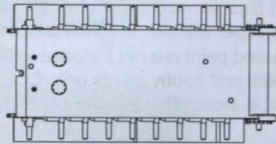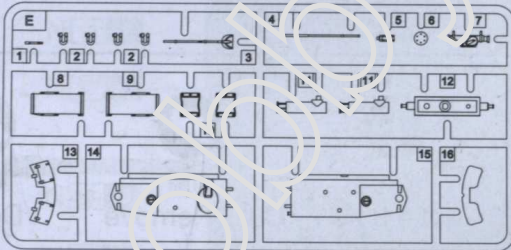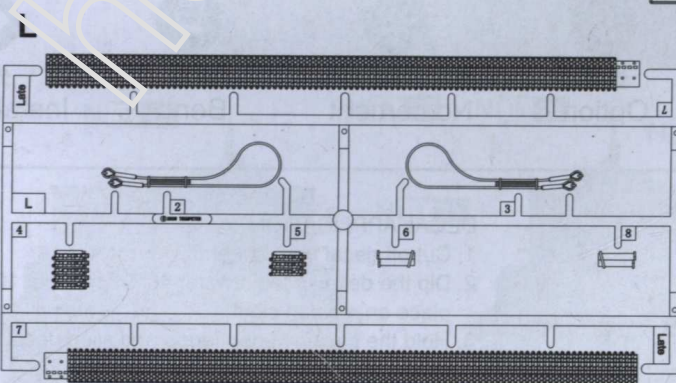6. Allow decal to dry completely before handling model.
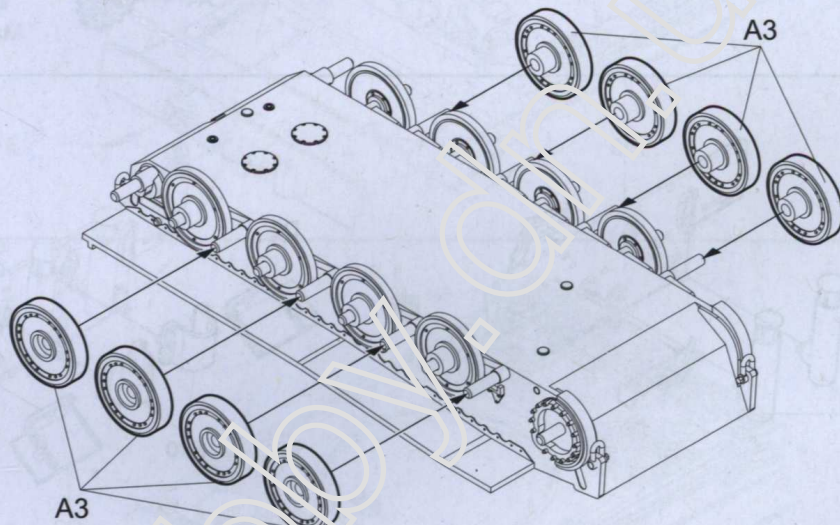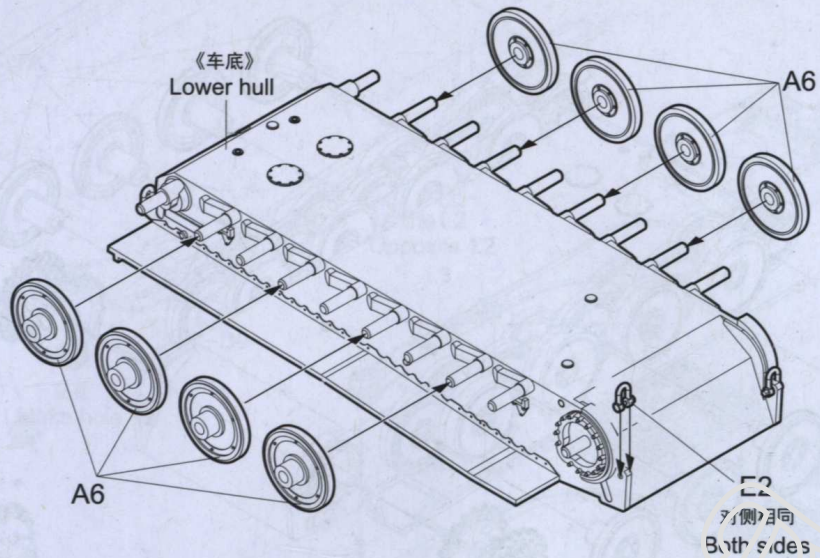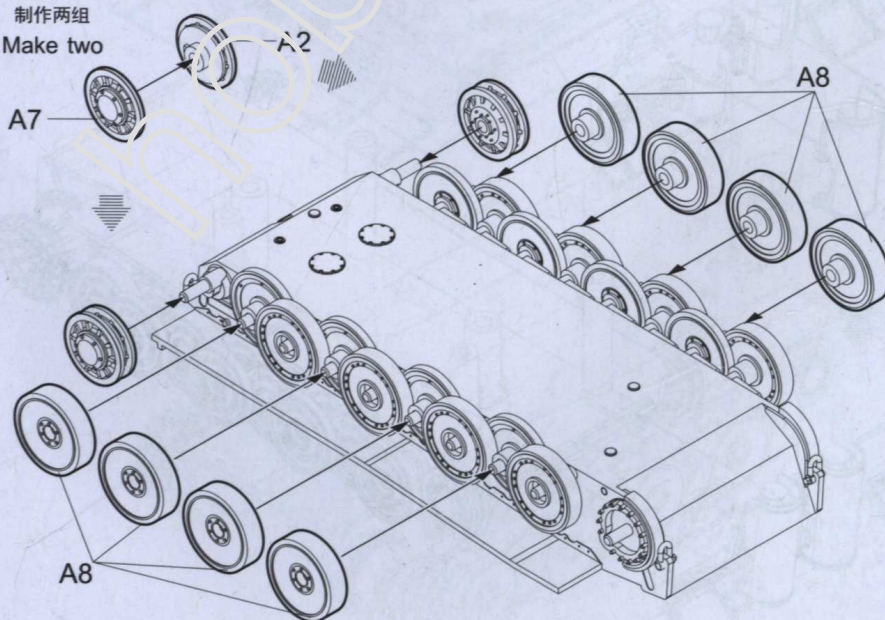
A

Y6

D

E

F

《车底》
Lower hull

《底座》
Stand

L

《水贴》
Decal

1 2
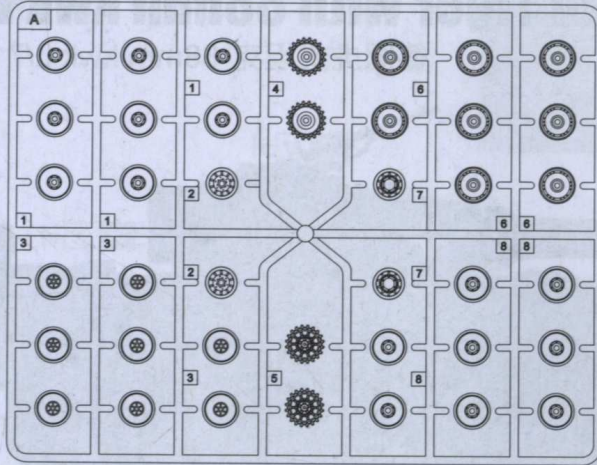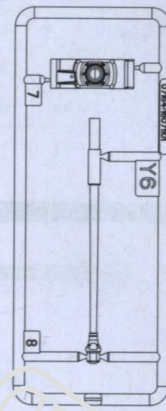
07164 1/72 German Tiger
with 88mm kwk L/71

不用部品
No used parts: E3.L6.L8.

1

《车底》
Lower hull

A6

A6

E2
前侧向
Both sides

A3

A3

制作两组
Make two

A2

A7

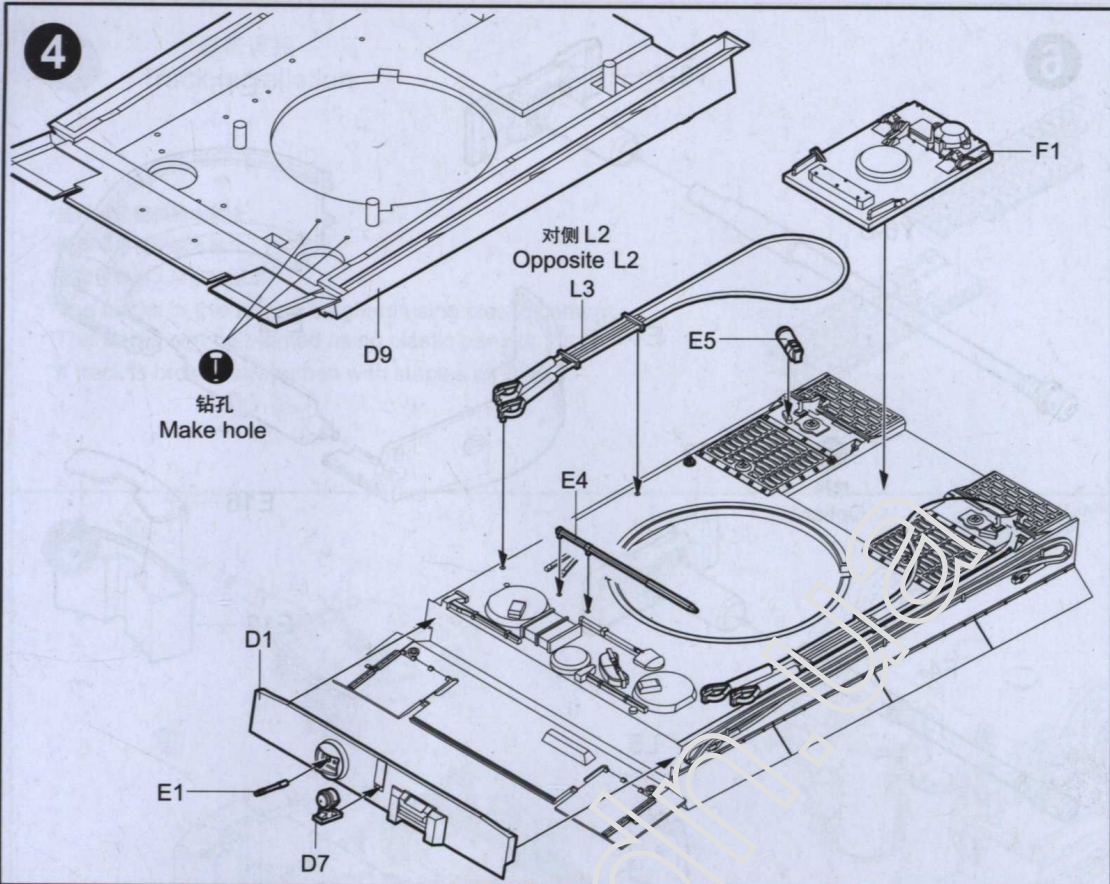A8

A8

②

A1

A1

A5

A4

制作两组
Make two

③

D8

D2

E11

E7

E10

D3

E9

E8

④

F1

对侧 L2
Opposite L2
L3

E5

E4

🔘
钻孔
Make hole

D9

D1

E1

D7

⑤

6

Y6-7

E15
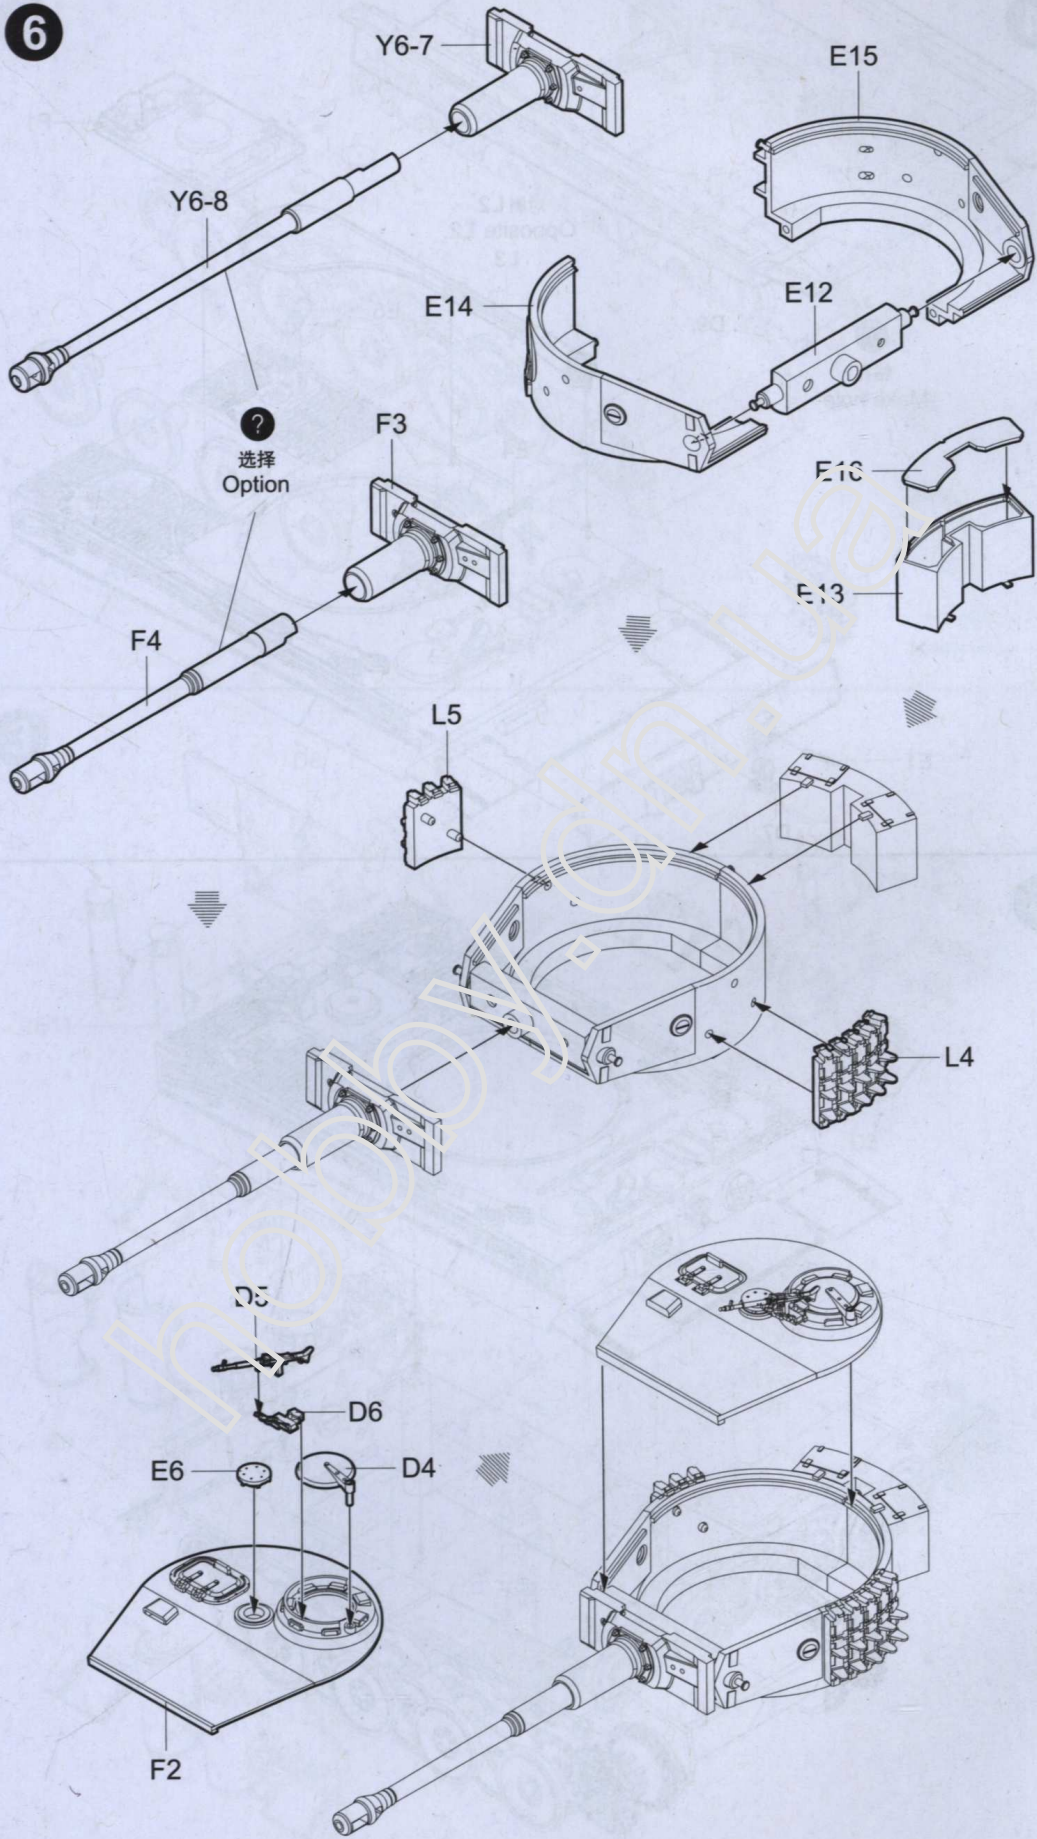
Y6-8

E14

E12

选择
Option

F3

E16

E13

F4

L5

L4

D5

D6

E6

D4

F2
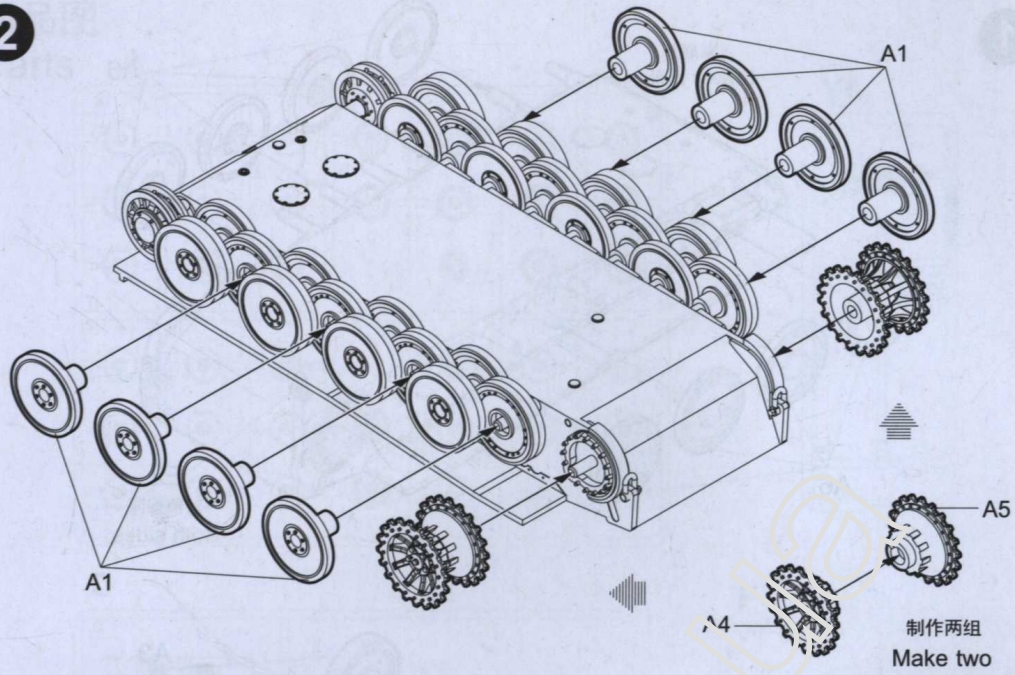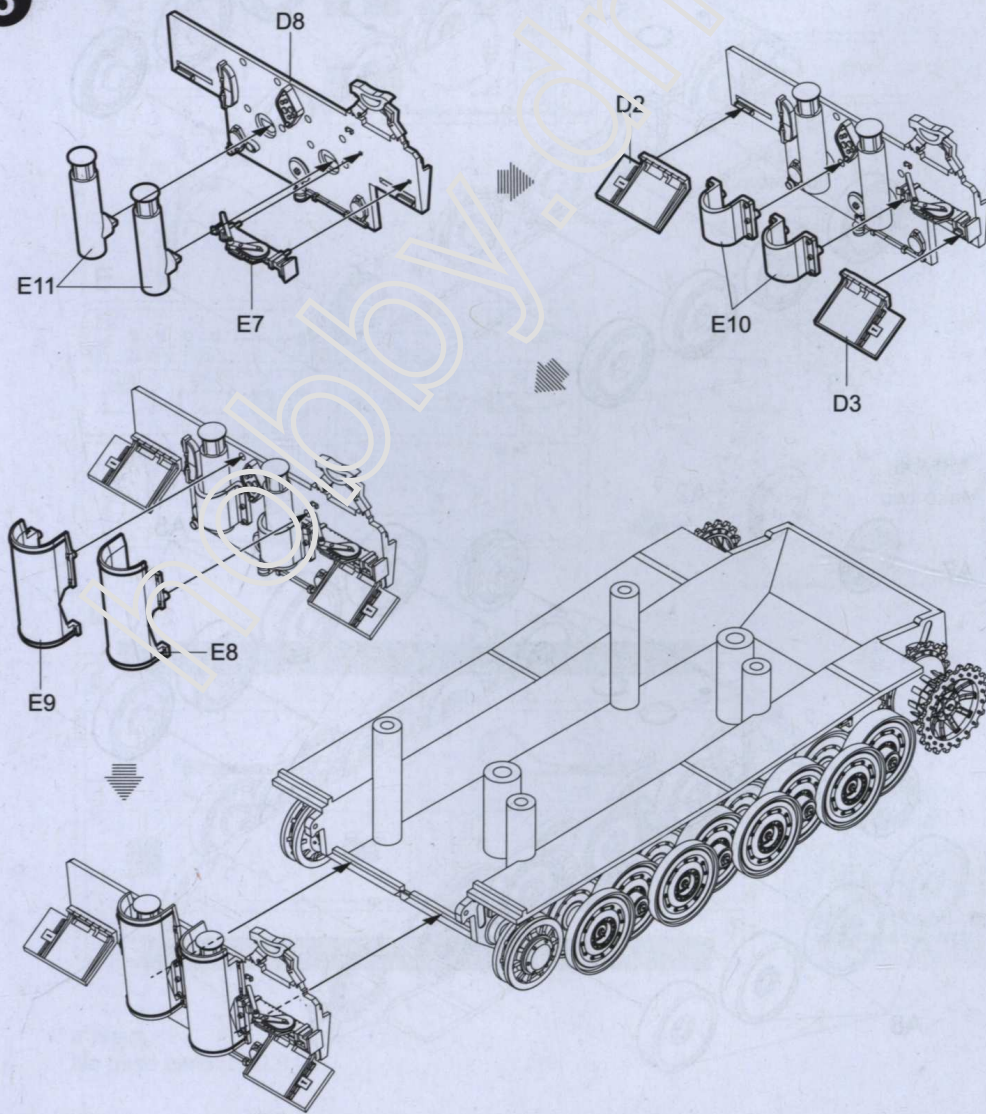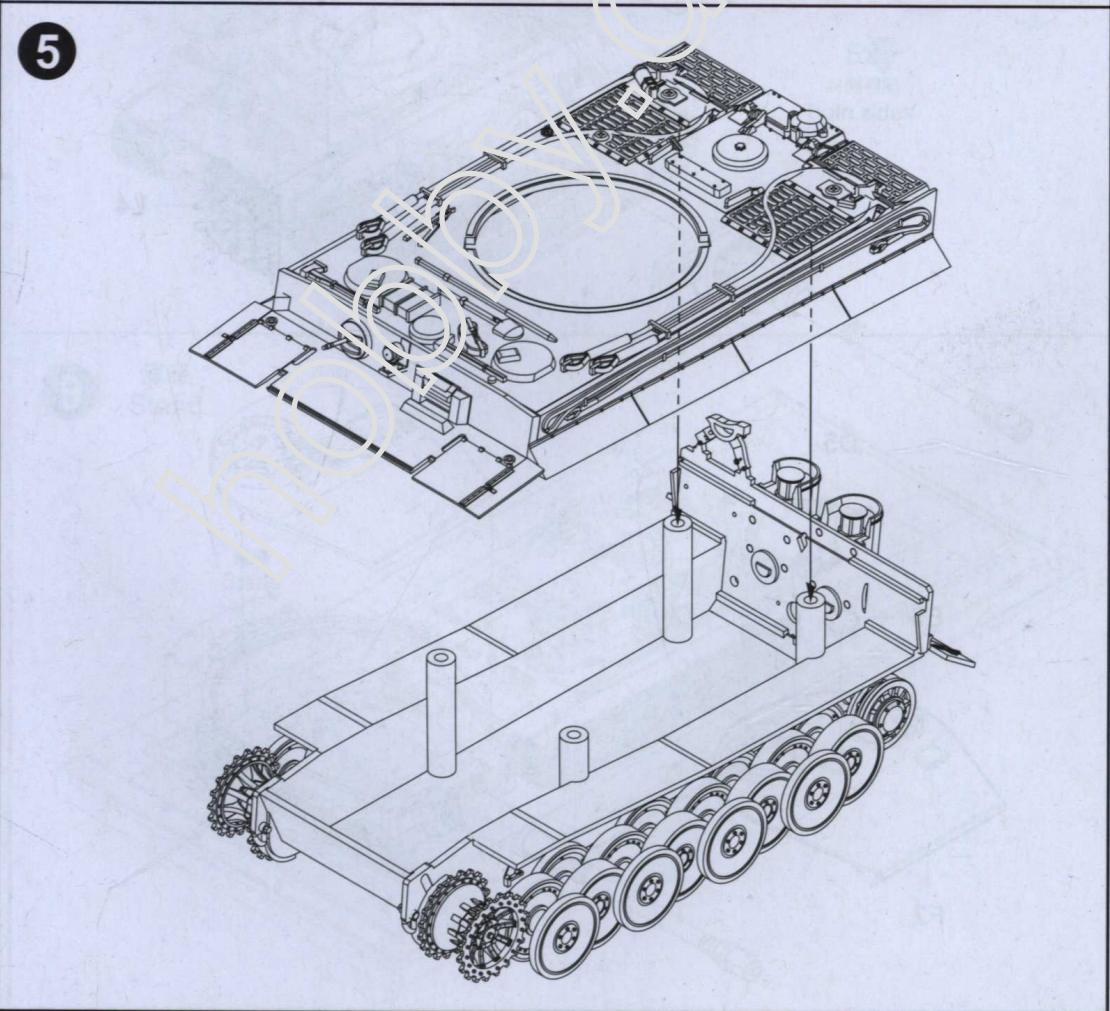
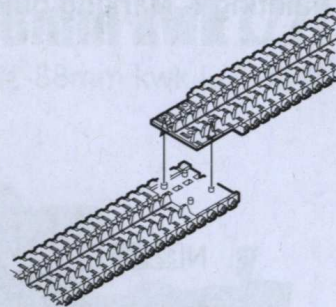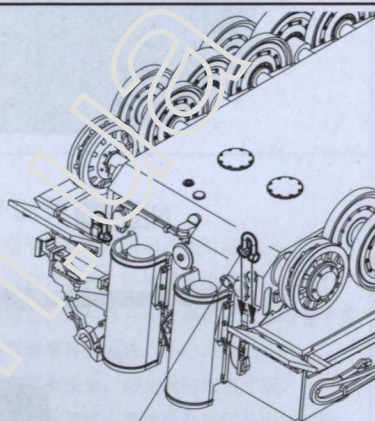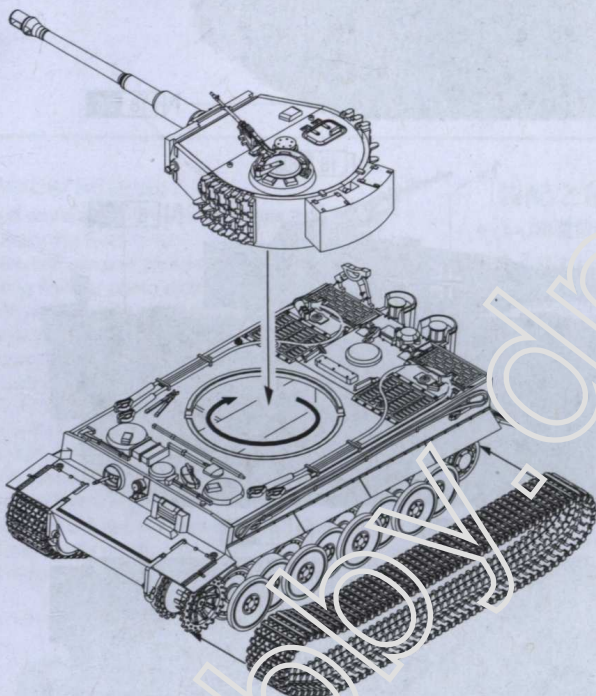**⑦** 履带连接
Track installation

*履带可用塑料胶水粘合
*履带可用模型胶水粘合
*若履带断裂，用细线固定
*The tracks in this kit can be glued using plastic cement.
*The tracks can be painted using plastic panints.
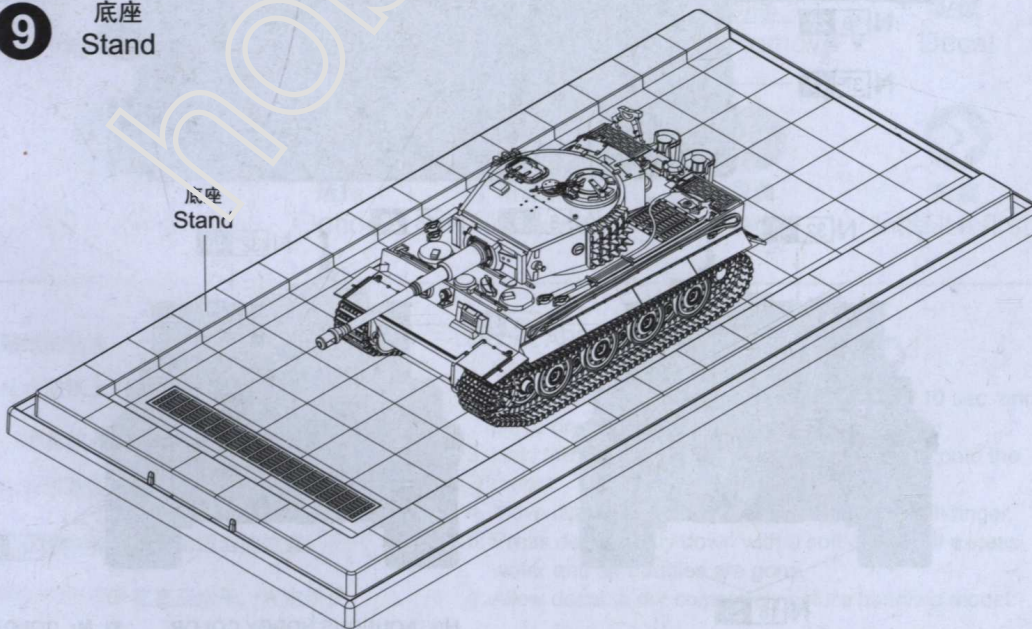*If track is broken strengthen with staples or thread.
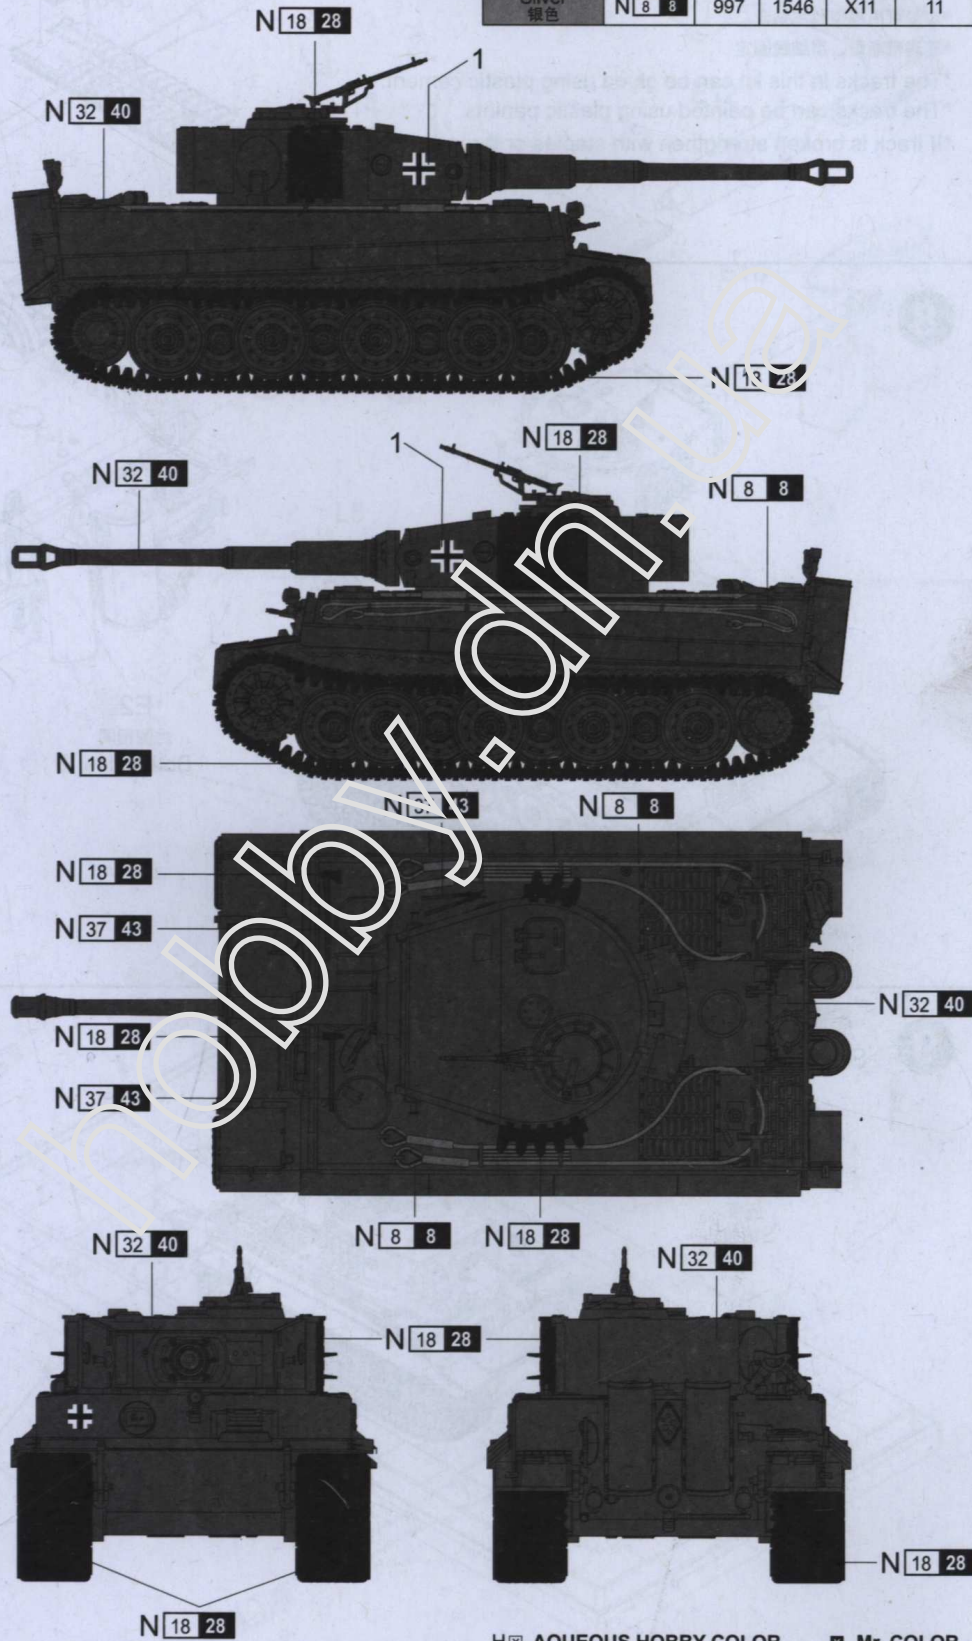
⑧

E2
对侧相同
Both sides

⑨ 底座
Stand

底座
Stand

涂装同标贴指示
Painting & Marking guide

PAINT REFERENCE COLOUR

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
Steel 黑铁色	N 18 28	864	1402	–	–
Field Gray 原野灰(1)	N 32 40	830	–	XF22	111
Wood Brown 木棕色	N 37 43	983	1701	–	186
Silver 银色	N 8 8	997	1546	X11	11

H⊠ **AQUEOUS HOBBY COLOR**   ⊠ **Mr. COLOR**